

Part No. N0008726 01  
26 August 2004

# **CallPilot**

## **Reference Guide**

**NORTEL**  
**NETWORKS**

---

# CallPilot Reference Guide

## Copyright © 2004 Nortel Networks

All rights reserved. 2004.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks NA Inc.

The software described in this document is furnished under a license agreement and may be used only in accordance with the terms of that license. The software license agreement is included in this document.

## Trademarks

NORTEL NETWORKS is a trademark of Nortel Networks.

Microsoft, MS, MS-DOS, Windows, and Windows NT are registered trademarks of Microsoft Corporation.

All other trademarks and registered trademarks are the property of their respective owners.

---

# Contents

---

<b>Chapter 1</b>	
<b>How to use this guide</b> .....	<b>7</b>
Conventions and symbols used in this guide .....	7
<b>Chapter 2</b>	
<b>Using CallPilot</b> .....	<b>9</b>
How CallPilot works .....	9
About display phones .....	9
One line display phones .....	9
Two line display phones .....	9
About telephone buttons .....	10
Alternate extensions .....	10
Using CallPilot with an analog terminal adapter or an analog station module .....	11
Using the dialpad .....	11
CallPilot voice prompts .....	12
Interrupting a voice prompt .....	12
Auto Attendant .....	13
Park and Page .....	13
Types of mailboxes .....	14
Subscriber mailbox .....	14
Guest mailbox .....	14
Information mailbox .....	14
Special mailboxes .....	15
General Delivery Mailbox .....	15
System Administrator Mailbox .....	15
<b>Chapter 3</b>	
<b>Setting up your mailbox</b> .....	<b>17</b>
Initializing your mailbox .....	17
Checking which mailbox interface you use .....	18
Opening your mailbox .....	19
Opening your mailbox using Auto-Login .....	19
Opening your mailbox remotely .....	19
Changing your mailbox password .....	20
Password lock-out .....	20
Password expiry .....	20
Recording your name in the Company Directory .....	21
Assigning a Target Attendant .....	22

<b>Chapter 4</b>	
<b>Feature codes and mailbox options</b>	<b>23</b>
Feature codes	23
Programming a memory button with a feature code	24
Norstar Voice mail mailbox options	25
Mailbox commands	25
Playing messages	25
Sending messages	26
Other Norstar Voice mail options	26
CallPilot mailbox options	27
Mailbox commands	27
Playing messages	27
Sending messages	28
Other CallPilot mailbox options	28
<b>Chapter 5</b>	
<b>Greetings</b>	<b>29</b>
Types of mailbox greetings	29
Primary mailbox greeting	29
Alternate mailbox greeting	30
Personalized mailbox greeting	30
Recording technique for mailbox greetings	30
Recording a Primary or Alternate mailbox greeting	31
Choosing a Primary or Alternate mailbox greeting	32
Recording a Personalized mailbox greeting	34
Deleting a Personalized mailbox greeting	35
<b>Chapter 6</b>	
<b>Accessing your messages</b>	<b>37</b>
Receiving calls	37
Never Full mailbox feature	37
Playing your messages	38
Retrieving erased messages	42
Screening your calls	43
Interrupting a caller	44
<b>Chapter 7</b>	
<b>Sending messages</b>	<b>45</b>
Recording and sending messages	45
Searching the Company Directory	50
Assigning message delivery options	51
Message delivery options	51

---

Sending a message to more than one recipient .....	55
Sending a message to a Group List .....	55
Forwarding a copy of a message to one or more recipients .....	55
Replying to messages .....	56
Replying to an internal caller .....	56
Replying to an external caller .....	58
Placing a call with Thru-Dial .....	59
When to use Thru-Dial .....	59
<b>Chapter 8</b>	
<b>Call Forwarding your calls .....</b>	<b>61</b>
Call Forwarding your calls to your mailbox .....	61
Setting up Call Forward remotely .....	62
Call Forward with Caller ID .....	63
Call Forward on Busy overrides CLID .....	63
<b>Chapter 9</b>	
<b>Transferring calls .....</b>	<b>65</b>
Transferring calls to a CallPilot mailbox .....	65
Transferring a mailbox owner's call to their mailbox .....	66
Transferring a call to Custom Call Routing (CCR) .....	67
About Outbound Transfer .....	68
Adding special characters to a destination number .....	68
Setting up Outbound Transfer .....	69
Turning Outbound Transfer on or off .....	71
Optimizing Outbound Transfer .....	72
Programming Outbound Transfer when CallPilot is behind a PBX .....	72
<b>Chapter 10</b>	
<b>Off-premise Message Notification .....</b>	<b>73</b>
About Off-premise Message Notification .....	73
Off-premise Message Notification parameters .....	74
Setting up Off-premise Message Notification .....	75
Setting up Off-premise Message Notification to a pager number .....	80
Example of a destination pager number .....	80
Changing Off-premise Message Notification .....	85
Deleting a destination number .....	93
Adding a destination number .....	94
Turning Off-premise Message Notification on or off .....	95

<b>Chapter 11</b>	
<b>Recording a call</b> .....	<b>97</b>
About Call Record .....	97
Using Call Record .....	97
<b>Chapter 12</b>	
<b>Broadcast and Information messages</b> .....	<b>99</b>
About Broadcast messages .....	99
Information mailbox greetings .....	99
Recording an Information mailbox greeting .....	100
<b>Chapter 13</b>	
<b>CallPilot tips</b> .....	<b>101</b>
<b>Chapter 14</b>	
<b>Troubleshooting</b> .....	<b>103</b>
<b>Glossary</b> .....	<b>107</b>
<b>Index</b> .....	<b>111</b>

---

## Chapter 1

# How to use this guide

---

This guide gives you detailed information about using CallPilot features on CallPilot 100/150 and Business Communications Manager systems.

To use this guide, you must determine which phone interface you use, and follow the procedures for that interface. For information about determining which interface you use, refer to [“Checking which mailbox interface you use”](#) on page 18. Some procedures apply to both interfaces.

If you are a new CallPilot user, make sure you are familiar with how to operate your display telephone. Refer to the User Card for your telephone.

For more information about using CallPilot, ask your System Administrator.

## Conventions and symbols used in this guide

The following conventions and symbols are used to describe features and how they operate.

Convention	Example	Used for
Word is in a special font (in the top line of the display)	Pswd:	Command line prompts on display telephones.
Underlined word in capital letters (shown in the bottom line of a two-line display telephone)	<u>PLAY</u>	Display button option. Available on two line display telephones. Press the button directly below the option on the display to proceed.
Dialpad buttons	#	Buttons you press on the dialpad to select a particular option.





---

## Chapter 2

# Using CallPilot

---

### How CallPilot works

CallPilot works with the telephone system to provide an automated receptionist service. CallPilot answers incoming calls, routes them to extensions and mailboxes in the system, and provides message taking capability.

### About display phones

#### One line display phones

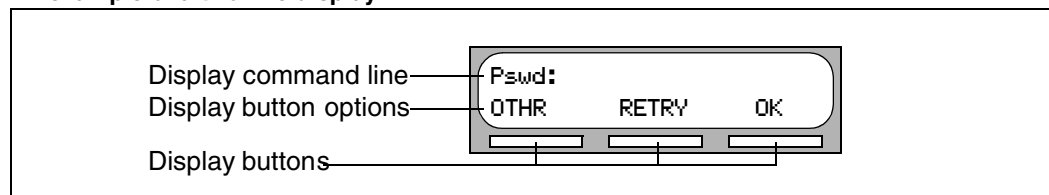
You can use one line display phones for most CallPilot sessions. If you use a one line display phone, the display shows the CallPilot display command line. A one line display phone does not show display button options.

On one line display phones, the options are announced by voice prompts. You make selections using the dialpad. You do not need to wait for the voice prompt to end before you can select an option. You can interrupt the voice prompt and make your selection immediately.

#### Two line display phones

Two line display phones show CallPilot commands and options. A two line display can show up to three display button options at once. In cases where there are more options, wait for the voice prompt to state the other available options. If you know the corresponding dialpad number for the option you want, you can press it any time during the voice prompt.

#### An example of a two line display



## About telephone buttons

This table shows the Nortel Networks Business Series Terminal buttons. Use the buttons that pertain to the type of telephone you use.

Button name	T7100, T7208, T7316	M7100, M7208, M7310, M7324	M7100N, M7208N, M7310N, M7324N
Feature		Feature	<b>F/X</b>
Handsfree	Bottom right-hand button		
Hold		Hold	
Volume Control			-<<<< >>>>+
Release		Rls	

You can enter , Feature or **F/X** and the code to use a feature. For example, press 9 8 1 to access your mailbox.

The T7100 works differently from other telephones on your system because it does not have line buttons. Where other telephones require that you select a line button to answer a call, on the T7100 terminal you pick up the handset. Where other telephones require you to select a line button to take a call off hold, you press on the T7100 terminal.

On T7100 terminals, you can answer a second call by pressing . Your active call is put on hold and you connect to the waiting call. You can have no more than two active calls at one time.

## Alternate extensions

You can have up to two Alternate extensions for your mailbox.

If a caller dials the main extension (an extension that has Alternate extensions assigned), the call rings only at the main extension. If the call is not answered and the caller leaves a message, a message indicator appears at the main extension and any Alternate extensions. You can access the message from Alternate extensions with the Open Mailbox feature ( 9 8 1), the same way that you access messages from your main extension phone. Only an extension without a mailbox assigned to it can be used as an Alternate extension.

Caller ID (CLID) is displayed on an Alternate extension only if:

- the Alternate extension is assigned to a phone with Caller ID (CLID)
- the Alternate extension has Call Display enabled
- the call at the primary set is forwarded to voicemail

If the call is not answered, the call goes to CallPilot and an audible tone occurs at all phones. For information on enabling Call Display refer to [“Call Forward with Caller ID” on page 63](#).

You can intercept the caller by using the Interrupt feature, 9 8 7, from any phone as long as the caller is still leaving a message. For more information on Interrupt refer to [“Interrupting a caller” on page 44](#).

## Using CallPilot with an analog terminal adapter or an analog station module

One or more analog single-line sets can be connected to telephone system using an Analog Terminal Adapter (ATA) or an Analog Station Module (ASM). This type of set works with Dual-Tone MultiFrequency (DTMF) tones to allow access to CallPilot options through the dialpad only. Rotary dials cannot be used internally with CallPilot.

To access CallPilot features such as Leave Message or Open Mailbox, call the CallPilot extension and follow the voice prompts. You can determine the CallPilot extension by entering

on any display telephone.

You can also press:

- to open your mailbox  
or
- to leave a message and follow the voice prompts.

## Using the dialpad

The buttons on your display telephone dialpad act as both numbers and letters. Each button represents a number and letters of the alphabet.

<b>To enter a character</b>	press the dialpad button that represents the letter or number. Press the button again to see the next letter or number.
<b>To accept a character</b>	press <input type="text" value="#"/> or press a different button. When you press another button, the cursor advances and the display shows the first character on the new button.
<b>To delete a character</b>	press the <u>BKSP</u> display button.

### Numbers and letters on the dialpad.

<input type="text" value="1"/> 1 ' -	<input type="text" value="2"/> A B C 2 a b c	<input type="text" value="3"/> D E F 3 d e f
<input type="text" value="4"/> G H I 4 g h i	<input type="text" value="5"/> J K L 5 j k l	<input type="text" value="6"/> M N O 6 m n o
<input type="text" value="7"/> P Q R S 7 p q r s	<input type="text" value="8"/> T U V 8 t u v	<input type="text" value="9"/> W X Y Z 9 w x y z
<input type="text" value="*"/> Quit	<input type="text" value="0"/> Q Z Zero q z	<input type="text" value="#"/> Accepts displayed letter and, (comma)

The display can show up to 16 characters. Whether the prompt remains on the display depends on the prompt. The examples on the next page show how the prompt can appear.

An example of a display with fewer than 16 characters, where the command line prompt remains on the display is the **Pswd:** command line prompt.

 


A rectangular display box with a thin border. The top line contains the text "Pswd:". The second line contains three options: "OTHR", "RETRY", and "OK", each separated by a small space.


The prompt disappears for these command line prompts:


- Name:
- Log:
- Dest ph:

This display shows the **Name:** command line prompt:




A rectangular display box with a thin border. The top line contains the text "Name:". The second line contains three options: "RETRY", "BKSP", and "OK", each separated by a small space.

 When you begin to enter the last name, the **Name:** command line prompt disappears. For example, if you enter the name Partridge, you press the dialpad button  for P, and the display drops the **Name:** prompt.



A rectangular display box with a thin border. The top line contains the text "P". The second line contains three options: "RETRY", "BKSP", and "OK", each separated by a small space.

 Although the name is only nine characters long, the command line prompt is not shown on the display after you enter the entire name.



A rectangular display box with a thin border. The top line contains the text "Partridge". The second line contains three options: "RETRY", "BKSP", and "OK", each separated by a small space.

## CallPilot voice prompts

Voice prompts announce which dialpad button to press to use CallPilot options. Voice prompts provide the same options as display buttons. Prompts also provide options that do not appear on the display. If you use a two line display phone, you can use either the display button or the dialpad button to access the option.

On a one line display phone the voice prompt plays immediately. If you do not choose an option after five seconds, the voice prompt replays the options. If you still do not choose an option, CallPilot ends the session.

On a two line display phone the voice prompt plays after a few seconds delay. If you do not choose an option, CallPilot ends the session.

### Interrupting a voice prompt

You can interrupt a voice prompt by selecting any option on the display or dialpad.

## Auto Attendant

The Auto Attendant acts as a receptionist for incoming calls. When it is enabled, the Auto Attendant answers your company's incoming phone lines depending on the time of day. If callers know which option they want, they can interrupt the Auto Attendant by entering their selection on the dialpad of any tone-dial phone.

The Auto Attendant provides callers with the voice prompts associated with:

- entering a mailbox number
- entering the extension
- using the Company Directory
- leaving a message
- reaching the Operator
- selecting an Alternate Language\* (there is no voice prompt for this option)

\* If CallPilot is installed with bilingual capabilities, callers can press **9** to hear voice prompts in the other language.

When a caller selects an option, the Auto Attendant responds to the command either by routing the call to an extension or mailbox within your company, or by directing the caller to the Company Directory or the Operator.

## Park and Page

With Park and Page external callers can press **6** to page you while they listen to your personal greeting or record a message.

When you are paged, the system plays your mailbox spoken name and where the call is located, for example "John Doe, 101".

If you have Park and Page enabled for your mailbox, you must let callers know that they can page you as part of your mailbox greeting, for example, "I'm not at my desk. To have me paged, press 6, otherwise leave a message at the tone."

Ask your System Administrator whether you have Park and Page enabled for your mailbox.

## Types of mailboxes

A mailbox is a storage place for messages. There are three types of mailboxes:

- Subscriber mailboxes, which include Guest mailboxes
- Information mailboxes
- Special mailboxes, which include the General Delivery Mailbox and the System Administrator Mailbox

Other types of mailboxes are available on your system if you have the Network Messaging or the Fax option installed.

### Subscriber mailbox

Most users have Subscriber mailboxes. A Subscriber mailbox is assigned by the System Administrator and is maintained by the mailbox owner. A Guest mailbox is a type of Subscriber mailbox.

A Subscriber mailbox can be assigned to each mailbox owner who has an operating display telephone with an extension.

### Guest mailbox

Guest mailboxes provide temporary employees and guests with access to internal messaging and call routing features. Guest mailboxes do not have an operating extension. They are assigned a number that looks and works like an extension. This lets the Guest mailbox owner access CallPilot the same way a subscriber accesses their mailbox from another extension or phone. If you need a guest mailbox, request one from the System Administrator.

### Information mailbox

Information mailboxes play informative messages to callers. Information mailboxes do not have an operating extension, and callers cannot leave a message in them. A voice prompt provides callers with access to Information mailboxes. Callers reach an Information mailbox through the Auto Attendant, Custom Call Routing (CCR) or the Operator.

Information mailboxes are created by the System Administrator, and either the System Administrator or a mailbox owner can record Information mailbox greetings. For more information on Information mailbox greetings, refer to [“Information mailbox greetings” on page 99](#).

## Special mailboxes

Special mailboxes are set up automatically when CallPilot is initialized.

The Special mailboxes include:

- General Delivery Mailbox
- System Administrator Mailbox

### General Delivery Mailbox

The General Delivery Mailbox stores messages:

- from callers who use a rotary dial phone
- for people in your company who do not have Subscriber mailboxes

The System Administrator, Receptionist or designated Operator can access the messages in the General Delivery Mailbox and send them to the appropriate mailbox.

### System Administrator Mailbox

This mailbox is used by your System Administrator as a personal mailbox. You can leave messages for the System Administrator in this mailbox. Broadcast messages must be sent from the System Administrator Mailbox.





---

## Chapter 3

# Setting up your mailbox

---

This chapter describes how to set up your mailbox and explains:

- [Initializing your mailbox](#)
- [Checking which mailbox interface you use](#)
- [Opening your mailbox](#)
- [Changing your mailbox password](#)
- [Recording your name in the Company Directory](#)
- [Assigning a Target Attendant](#)

## Initializing your mailbox

Initializing your mailbox prepares your mailbox to receive messages. Your mailbox cannot receive and store messages until it is initialized.

Initializing your mailbox involves:

- choosing a password from four to eight digits long that does not start with zero
- changing the CallPilot default password (0000) to your password
- recording your name in the Company Directory

### To initialize your mailbox

**1** Press    .

**2** Log on by following the voice prompts or the display button options.

Must change pswd

**3** This display appears briefly to indicate that you must change your password.

Pswd:  
RETRY

**4** Enter a new password from four to eight digits long that does not start with zero.  
Press  or .

Again:  
RETRY

**5** Reenter your new mailbox password and press  or .

Record name:  
RETRY

**6** At the tone, record your name in the Company Directory.  
Include your mailbox number in the recording, For example, "Pat Smith, mailbox 5813."

Press  or  to end the recording.

```
Accept name?  
RETRY  PLAY  OK
```

- 7 Press **OK** or **#** to accept the recording or press **PLAY** or **1** to listen to the recording or press **RETRY** or **2** to re-record your name.
- 8 Press **END** to end the session.

After you initialize your mailbox, record your mailbox greetings.

Refer to [“Recording a Primary or Alternate mailbox greeting” on page 31](#) for more information. If you do not record a Personal greeting, your Company Directory name plays to callers who reach your mailbox.

## Checking which mailbox interface you use

CallPilot supports two interfaces: Norstar Voice Mail and CallPilot. The System Administrator determines which interface is assigned to your mailbox.

Use this procedure to check which mailbox interface you use, then follow the procedures in the guide that apply to the interface you use.

Some procedures apply to both interfaces.

### To check which mailbox interface you use

- 1 Press **END** **9** **8** **1**. Follow the voice prompts or the display button options to open your mailbox.
- 2 Check the display to see which interface you use:

```
0 new 0 saved  
PLAY  REC  ADMIN
```

This is the Norstar Voice Mail interface.

```
No messages  
COMP  MBOX  EXIT
```

This is the CallPilot interface.

- 3 Press **END** to end the session.

## Opening your mailbox

After you initialize your mailbox you can open it from:

- your own extension
- another CallPilot extension
- an outside tone dial phone

### To open an initialized mailbox - Norstar Voice Mail

1 Press **[\*] 9 8 1**.

Pswd:  
OTHR RETRY OK

2 Enter your mailbox password and press **OK** or **#** or if you are at another extension, or if you are using a Guest mailbox, press **OTHR** or **\*** to display the **Log:** prompt.

When this prompt appears, enter your mailbox number and password. Your mailbox number is usually the same as your extension.

### To open an initialized mailbox - CallPilot

1 Press **[\*] 9 8 1**.

Mbox:  
RETRY OK

2 Press **#** or if you are at another extension, enter your mailbox number and then press **OK** or **#**.

Your mailbox number is normally the same as your extension.

Pswd:  
RETRY OK

3 Enter your mailbox password and press **OK** or **#**.

## Opening your mailbox using Auto-Login

If your System Administrator has enabled Auto-Login for your mailbox, you can open your mailbox by pressing **[\*] 9 8 1**. You do not need to enter your mailbox number or password. Auto-Login only from your primary or alternate telephones. Ask your System Administrator whether you can use Auto-Login.

## Opening your mailbox remotely

- 1 To open your CallPilot mailbox from an outside tone dial phone, during your greeting press **\* \*** or enter the CallPilot extension number to open your mailbox. If you are in Europe or Australia press **8 8** or enter the CallPilot extension number.
- 2 Follow the voice prompts to enter your mailbox number and password.

## Changing your mailbox password

You can change your mailbox password at any time. A password must be from four to eight digits long and cannot start with zero. It is recommended that you change your password every 30 days.

Keep your mailbox secure by choosing an uncommon password, not a predictable password like 1234 or 1111. Avoid giving your password to your co-workers. If someone else knows your password, they can access your mailbox and listen to or delete your messages.

### To change your password

- 1 Press .  
Follow the voice prompts or the display buttons to open your mailbox.
- 2 If you use the CallPilot interface:
  - Press to open the Mailbox Password menu
  - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or
- Press **PSWD** or
- Go to step 3

Pswd:  
RETRY

- 3 Enter your new mailbox password and press **OK** or .

Again:  
RETRY

- 4 Re-enter your new mailbox password and press **OK** or .

- 5 Press to end the session.

### Password lock-out

For security reasons, the System Administrator can assign each mailbox a maximum number of incorrect password attempts. If the number is reached, you are locked out. You cannot access your mailbox until the password is reset. Ask your System Administrator to reset the password.

### Password expiry

Mailboxes can be assigned a maximum number of days that a password remains active. If you open your mailbox after your password expires, you hear the message “*Your current password has expired. You must change your password. Please enter your new password, then press .*”

## Recording your name in the Company Directory

 



The Company Directory is a list of mailbox users on the CallPilot system. Before you can use your mailbox to receive messages, you must record your spoken name in the Company Directory. It is a good idea to include your mailbox number in your Company Directory recording. For example “*Pat Smith, mailbox 5813*”.

This establishes your “voice” name in a directory that is used by other CallPilot users and outside callers who use the Company Directory.




If you do not want your name in the Company Directory, tell your System Administrator. The Company Directory feature can be disabled by the System Administrator. If you do not know whether you have this feature, ask your System Administrator.

You can change or re-record your name in the Company Directory at any time.



### To record your name in the Company Directory

 
- 1 Press    .  
Follow the voice prompts or the display button options to open your mailbox.


- 2 If you use the CallPilot interface:



- Press    to open the Company Directory
- Go to step 3


 
 
If you use the Norstar Voice Mail interface:


- Press **ADMIN** or 
- Press . This is a voice prompt and does not appear as a display button.
- Go to step 3

Record name?  
RETRY 

- 3 At the tone, record your name.  
Press **OK** or  to end the recording.

Accept name?  
RETRY  

- 4 Press **OK** or  to accept the recording  
or  
press **PLAY** or  to listen to the recording  
or  
press **RETRY** or  to re-record your name.

- 5 Press  to end the session.

## Assigning a Target Attendant

You can assign a Target Attendant to answer calls transferred from your mailbox. The default Target Attendant for your mailbox is the CallPilot Operator. The Target Attendant can be assigned to any valid extension.

After you assign your Target Attendant, a caller who reaches your mailbox can press **0** to speak with the Target Attendant. If you do not have a Target Attendant assigned, callers who press **0** return to your mailbox.

Remember to tell callers in your greetings that if they need assistance they can press **0** to speak to the Target Attendant. For example, “Please press **0** to speak to my assistant.”

### To assign a personal Target Attendant

- 1 Press **☎ 9 8 1**.  
Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **8 0** to open the Company Directory
- Press **ASST** or **1** to open the Target Attendant menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **8**
- Press **5** to open the Target Attendant menu
- Go to step 3

```
Atdt ext: oper
CHNG          QUIT
```

- 3 Press **CHNG** or **1** to change the Target Attendant.  
The **Atdt ext: oper** prompt shows that the current attendant is the CallPilot operator.

```
Ext:
RETRY        OPER
```

- 4 Enter the extension number of the new Target Attendant or press **OPER** or **0** to change the Target Attendant to the CallPilot Operator.

```
Atdt ext:<xxxx>
CHNG          QUIT
```

- 5 The display shows the extension you entered.

- 6 Press **☎** to end the session.

 























---

## Chapter 4

### Feature codes and mailbox options

---

#### Feature codes

                     Feature code name	Dialpad buttons	Description
Leave Message	  	Leaves a message in a mailbox. No password is required.
Open Mailbox	  	Opens your mailbox to play your messages and to access mailbox options.
Call Forward	  	Forwards incoming calls to your mailbox.
CallPilot extension	  	Displays the CallPilot extension number on your phone.
Transfer	  	Transfers calls to a mailbox on the CallPilot system.
Interrupt	  	Intercepts a caller who is listening to your mailbox greeting or leaving a message.
Name Dialing	  	Lets you dial calls by searching the Company Directory.
Call Record	  	Records a call and stores it in your mailbox.

For information on programing a feature code onto a memory button of a display phone, refer to [“Programming a memory button with a feature code” on page 24.](#)

## Programming a memory button with a feature code

Each CallPilot feature code can be programmed to a single memory button.

- 1 Press **[e] [\*] [3]**.  
Do not lift your handset.
- 2 The display shows **Program Features**.
- 3 Press a memory button with an LCD indicator.
- 4 Press **[e]**.
- 5 Enter the feature code number that you want to program.  
For example, enter **[9] [8] [0]** to program the Leave Message feature code. See the table “[Feature codes](#)” on page 23 for the feature codes.  
  
Repeat steps 1 through 5 for each feature code you want to program.
- 6 The display shows that the button is programmed, and then ends the session.

Program Features

Press a button  
QUIT

Feature Code:  
QUIT

F\_  
QUIT CLEAR

Programmed

Use the paper labels that come with your telephone to identify the programmed button. To use the feature, press the labeled button.



## Norstar Voice mail mailbox options

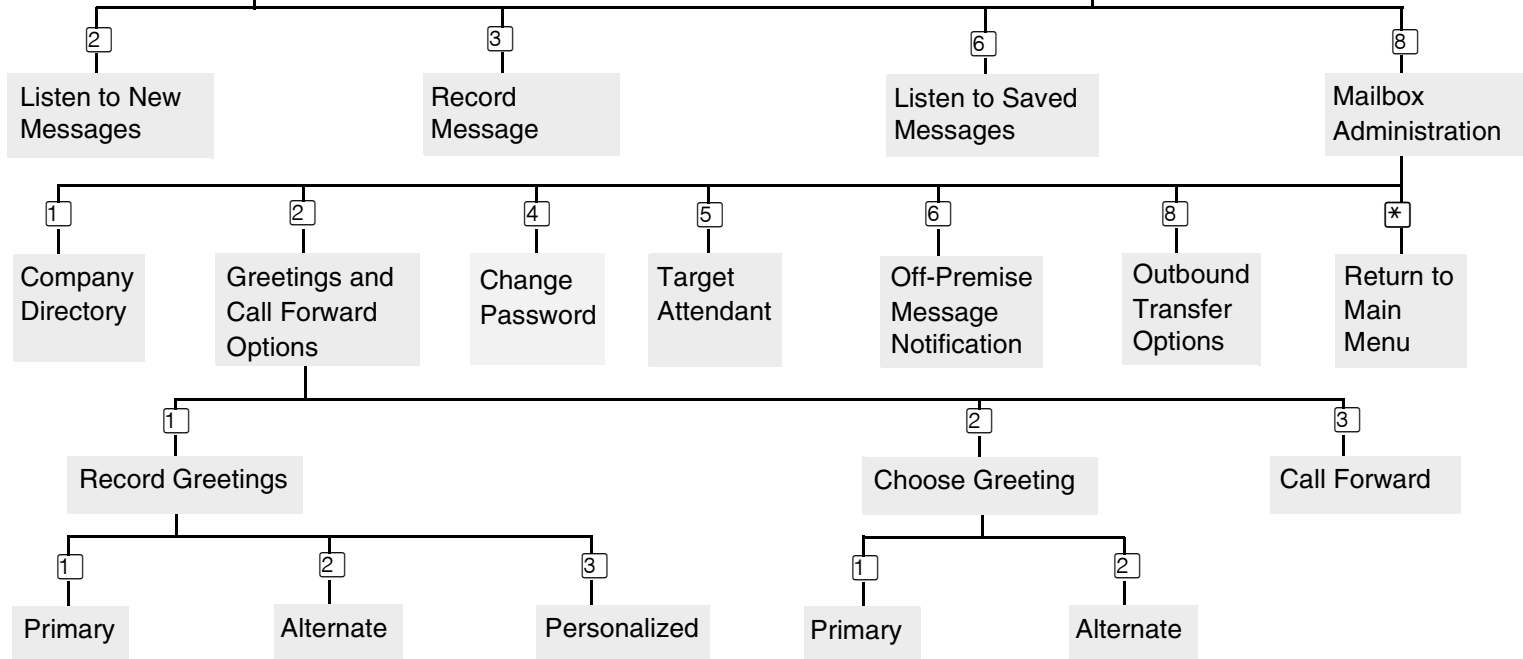
### Mailbox commands

From your display telephone enter **☎ 9 8 1**.

Follow the voice prompts or the button options on your display telephone to open your mailbox.

From an outside tone dial telephone, dial your company's telephone number.

When CallPilot answers, press **\* \*** and follow the voice prompts to open your mailbox.




### Playing messages

From your display telephone enter **☎ 9 8 1**.

Follow the voice prompts or the button options on your display telephone to open your mailbox.

From an outside tone dial telephone, dial your company's telephone number.

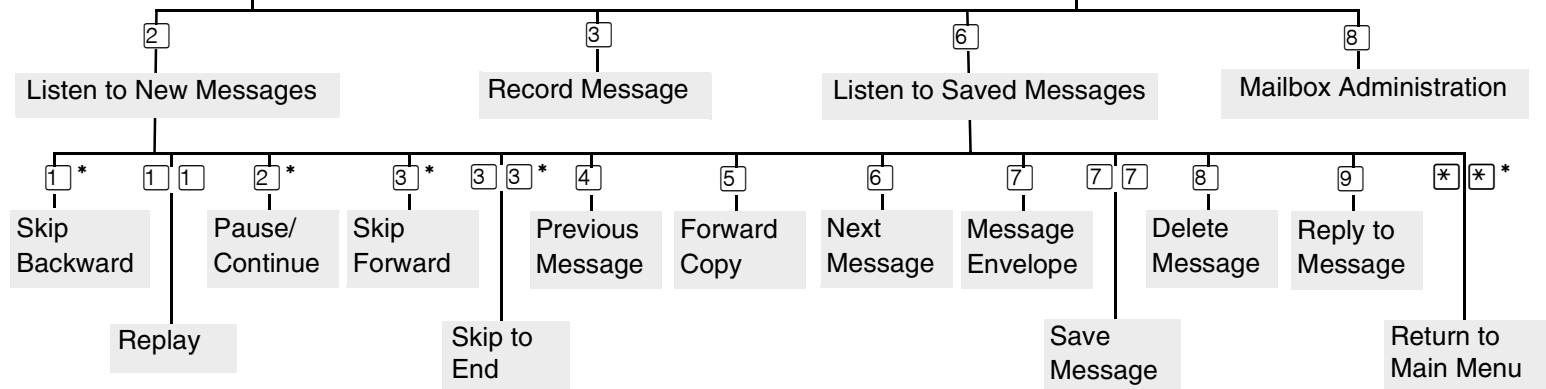When CallPilot answers, press **\* \*** and follow the voice prompts to open your mailbox.



\* Applies only when message is playing.


## Sending messages

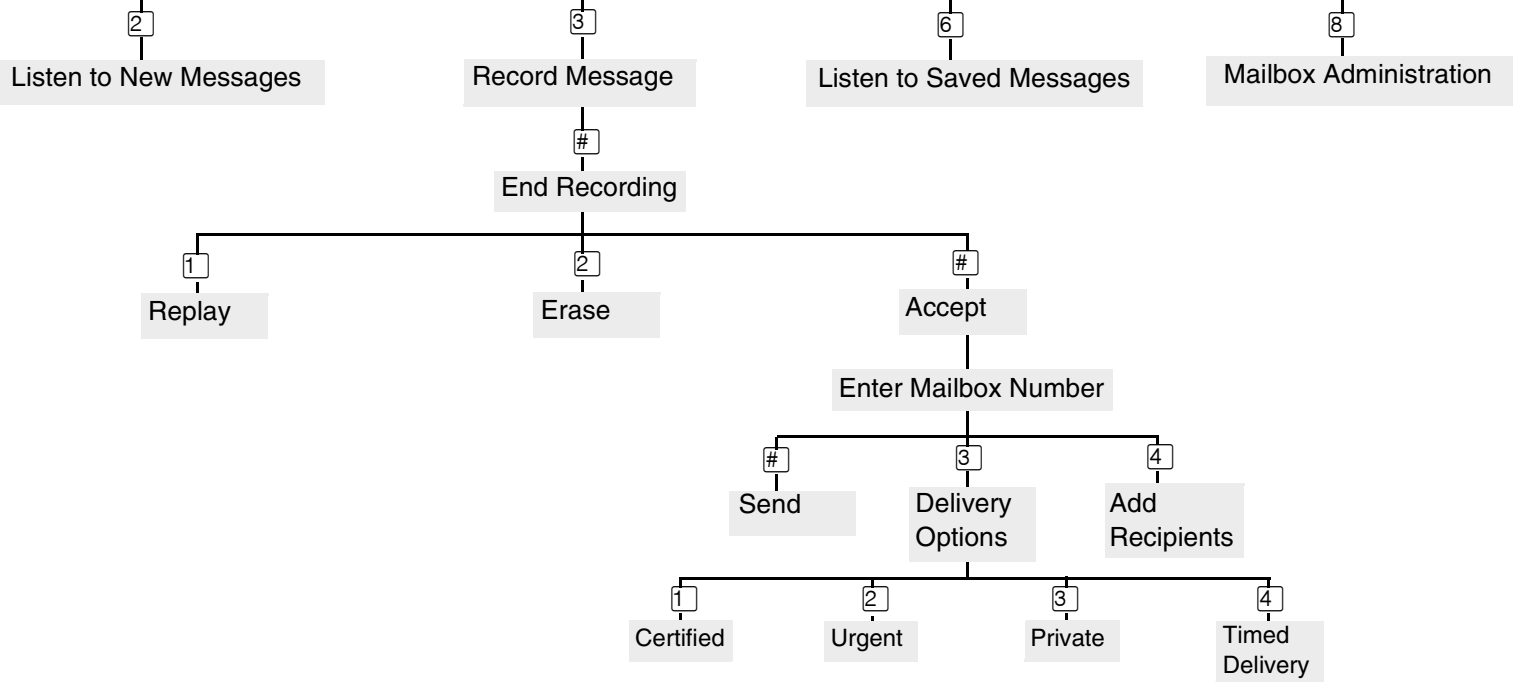From your display telephone enter **9 8 1**.

Follow the voice prompts or the button options on your display telephone to open your mailbox.

From an outside tone dial telephone, dial your company's telephone number.

When CallPilot answers, press **\* \*** and follow the voice prompts to open your mailbox.



## Other Norstar Voice mail options

Mailbox option	Description	Page
Greetings and Call Forward	Record and select Personal mailbox greetings. Forward calls directly to your mailbox.	34 61
Off-premise Notification	Set up Off-premise Notification parameters for messages left in your mailbox.	75
Record message	Record and send a message.	45
Auto Attendant	Go to the Auto Attendant Menu options.	--
Company Directory	Record your name in the Company Directory.	21
Listen to new messages	Play any new messages in your mailbox.	38
Change Password	Change your mailbox password.	20
Target Attendant	Assign a Target Attendant to answer calls transferred from your mailbox.	22
Outbound Transfer	Set up Outbound Transfer to transfer callers from your mailbox to an internal extension or to an external telephone number.	68

# CallPilot mailbox options

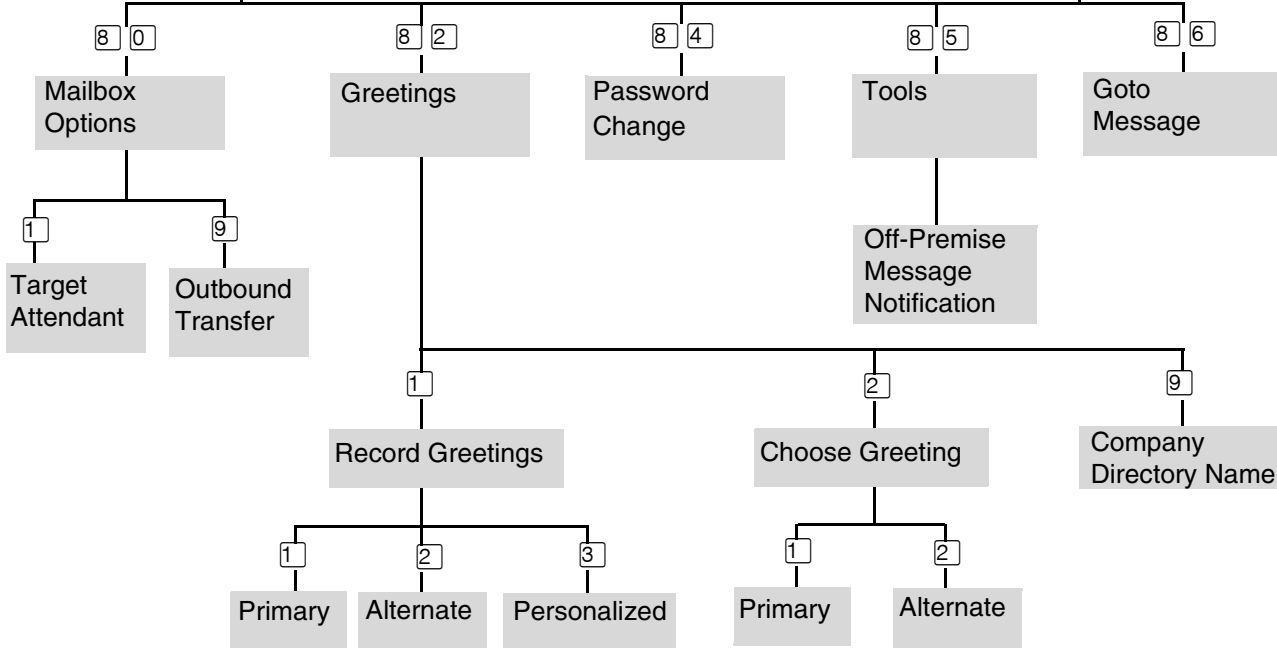
## Mailbox commands

From your display telephone enter **☎ 9 8 1**.

Follow the voice prompts or the button options on your display telephone to open your mailbox and listen to messages.

From an outside tone dial telephone, dial your company's telephone number.

When CallPilot answers, press **\* \*** and follow the voice prompts to open your mailbox and listen to messages.



## Playing messages

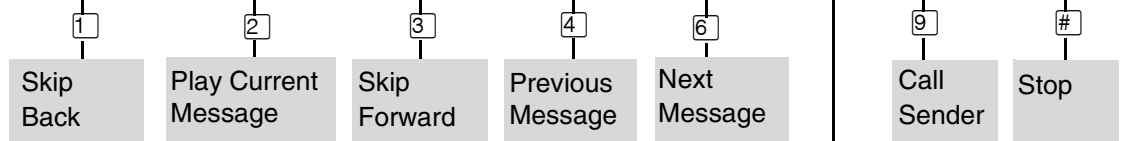
From your display telephone enter **☎ 9 8 1**.

Follow the voice prompts or the button options on your display telephone to open your mailbox.


From an outside tone dial telephone, dial your company's telephone number.

When CallPilot answers, press **\* \*** and follow the voice prompts to open your mailbox.

When there are messages in your mailbox these commands are available.



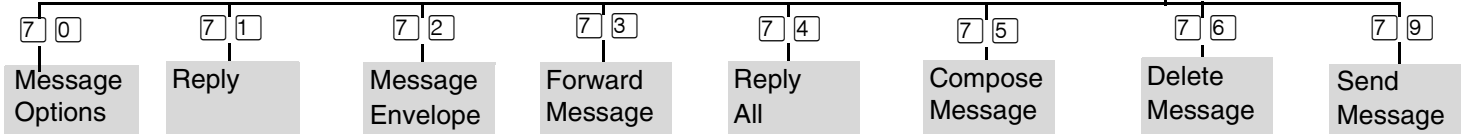Use these commands to review, send and respond to messages.




## Sending messages

From your display telephone enter **7 9 8 1**.

Follow the voice prompts or the button options on your display telephone to open your mailbox.

From an outside tone dial telephone, dial your company's telephone number.

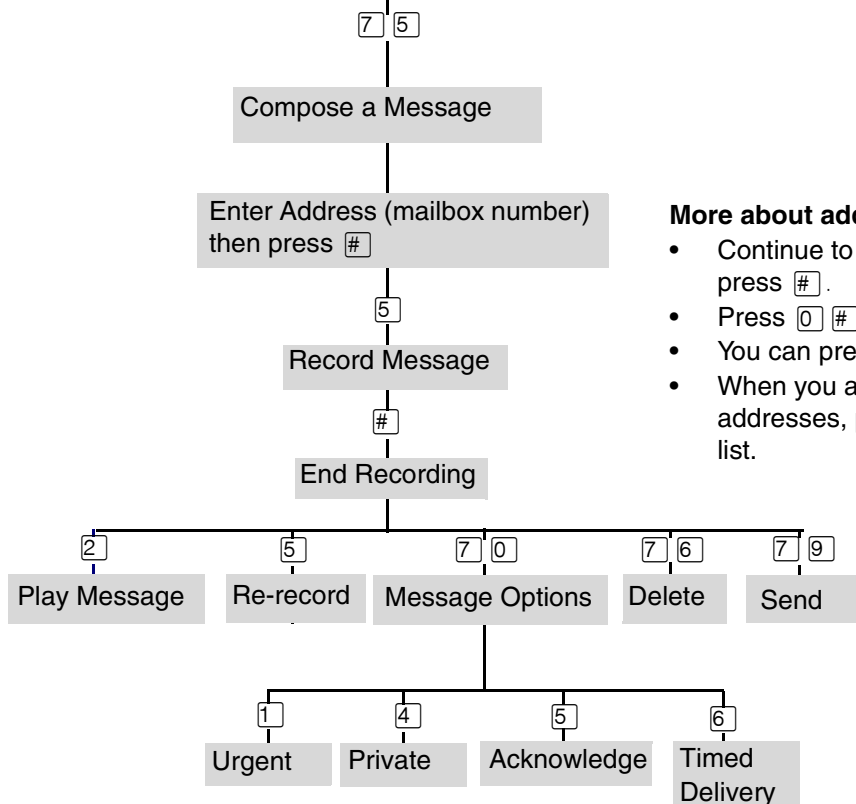When CallPilot answers, press **\* \*** and follow the voice prompts to open your mailbox.



### More about addresses:

- Continue to enter addresses and then press **#**.
- Press **0 #** to cancel an address
- You can press **1 1** to dial by name.
- When you are finished entering addresses, press **#** again to end the list.

## Other CallPilot mailbox options

Mailbox option	Description	Page
Greetings	Record and select personal mailbox greetings.	<a href="#">34</a>
Password Change	Change your mailbox password.	<a href="#">20</a>
Off-premise Notification	Set up Off-premise Notification parameters for messages left in your mailbox.	<a href="#">75</a>
Goto Message	Enter a specific message number and go to that message: <ul style="list-style-type: none"> <li>• Press <b>FIRST</b> or <b>1</b> to go to the first message in your mailbox.</li> <li>• Press <b>LAST</b> or <b>2</b> to go to the last message in your mailbox.</li> </ul>	
Personal Verification	Record your name in the Company Directory.	<a href="#">21</a>
Target Attendant	Assign a Target Attendant to answer calls transferred from your mailbox.	<a href="#">22</a>
Outbound Transfer	Set up Outbound Transfer to transfer callers from your mailbox to an internal extension or an external telephone number.	<a href="#">68</a>

---

## Chapter 5

# Greetings

---

This chapter describes mailbox greetings and how to record them.

This chapter includes:

- [Types of mailbox greetings](#)
- [Recording a Primary or Alternate mailbox greeting](#)
- [Recording a Personalized mailbox greeting](#)
- [Deleting a Personalized mailbox greeting](#)

## Types of mailbox greetings

Mailbox greetings play to callers who reach your mailbox. Greetings inform callers that they have reached the correct mailbox and give callers any necessary information or instructions. You can change the greetings at any time.

After you initialize your mailbox, you can record greetings. If you do not record any greetings, your Company Directory name plays to callers who reach your mailbox. Refer to [“To record your name in the Company Directory” on page 21](#)”.

There are three types of mailbox greetings: Primary, Alternate and Personalized.

### Primary mailbox greeting

Record your Primary mailbox greeting for everyday use. In this greeting include your name and a brief message explaining to callers that you are unable to answer their calls.

For example, *Hi. This is Pat Smith. I'm not able to take your call right now. Please leave me a message at the tone and I will return your call as soon as possible.*”

If you are a new mailbox owner, record your Primary mailbox greeting immediately.



**Note:** If you have Park and Page enabled for your mailbox, you must let callers know that they can page you as part of your mailbox greeting, for example, “I’m not at my desk. To have me paged, press 6, otherwise leave a message at the tone.”

Ask your System Administrator whether you have Park and Page enabled for your mailbox.

For information about Park and Page, see [“Park and Page” on page 13](#).

---

### **Alternate mailbox greeting**

The Alternate mailbox greeting is normally used for special circumstances.

For example, *“Hi. This is Pat Smith. I am out of the office until Thursday, the 17th of December. Although I am out of the office, I do check my mailbox daily. Please leave me a message at the tone and I will return your call as soon as possible. Thank you.”*

After you record your greetings, you must choose which greeting you want CallPilot to play. You can change the selection at any time.

### **Personalized mailbox greeting**

Personalized mailbox greetings are available only if your company subscribes to Caller ID (CLID) service from your local telephone company. For more information about CLID, ask your System Administrator.

A Personalized mailbox greeting plays to callers based on the caller’s telephone number. CallPilot recognizes the assigned incoming telephone number and plays the Personalized mailbox greeting.

For example, *“Hi Susan. I may have missed your call, but I don’t want to miss meeting you for lunch. See you at noon.”*

### **Recording technique for mailbox greetings**

When you record your mailbox greetings, remember to speak clearly and at a pace that is easy to understand. After you record a greeting, you can replay it before you accept it. You can record or change a greeting from any display telephone.

If you are away from the office, you can record a greeting from any tone dial telephone. When you record a greeting, do not use the Handsfree feature. You get better results if you speak directly into the handset.

## Recording a Primary or Alternate mailbox greeting

Only a Primary mailbox greeting is necessary, but you can record an Alternate mailbox greeting for times when you are out of the office, such as vacations. If you do not record any mailbox greetings, your Company Directory name recording plays to callers who reach your mailbox.

If you record both Primary and Alternate mailbox greetings, you must choose which greeting plays. If you do not choose a greeting, the Primary mailbox greeting automatically plays. For information on how to choose a greeting, refer to [“Choosing a Primary or Alternate mailbox greeting” on page 32](#)”.

### To record a Primary or Alternate mailbox greeting

- 1 Press **[\*] 9 [8] 1**.  
Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:
  - Press **[8] 2** to open the Greetings Options menu
  - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **GREET** or **[2]**
- Go to step 3

```
Greeting options
REC  CHOOSE  CFWD
```

- 3 Press **REC** or **[1]**.

```
Greeting:
PRIME  ALT  PERS
```

- 4 Press **PRIME** or **[1]** to record the Primary greeting or press **ALT** or **[2]** to record the Alternate greeting. If you are changing a greeting, the current greeting starts to play.

```
Not recorded
```

- 5 If this is the first time you are recording a greeting, this display appears briefly.

```
Record now?
YES  NO  QUIT
```

- 6 Press **YES** or **[1]** and record your greeting at the tone.

```
Record greeting:
RETRY  OK
```

- 7 Press **OK** or **#** to end the recording.

```
Accept greeting?
RETRY  PLAY  OK
```

- 8 Press **OK** or **#** to accept the recording or press **PLAY** or **[1]** to listen to the greeting or press **RETRY** or **[2]** to rerecord the greeting.

- 9 Press **[\*]** to end the session.

## Choosing a Primary or Alternate mailbox greeting

If you record a Primary and an Alternate mailbox greeting, you must choose which greeting plays. If you do not choose a greeting, the Primary mailbox greeting plays automatically.

If you choose the Alternate mailbox greeting, you must set whether the mailbox accepts messages. If you choose Yes your mailbox receives messages in the normal way.

If you choose No:

- Messages cannot be left in the mailbox.
- The Alternate mailbox greeting takes precedence over all other greetings.
- If a caller presses a button to fast forward the message, they hear a voice prompt that says this is a special greeting.
- If a caller presses a button to send a fax, the fax goes to the General Delivery Mailbox, not your personal mailbox.

If you choose the Alternate mailbox greeting, remember to change back to the Primary mailbox greeting at the appropriate time.

## To choose a Primary or Alternate mailbox greeting

- 1 Press **[\*] 9 8 1**.

Follow the voice prompts or the display button options on your telephone to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **[8] [2]** to open the Greetings Options menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **GREET** or **[2]**
- Go to step 3

Greeting options  
REC CHOOSE CFWD

- 3 Press **CHOOSE** or **[2]** to select a greeting.

Use greeting:  
PRIME ALT QUIT

- 4 Press **PRIME** or **[1]** to select the Primary mailbox greeting and go to step 6  
or  
press **ALT** or **[2]** to select the Alternate mailbox greeting and go to step 5.



Accept msgs:Y  
CHNG OK

- 5 If you choose the Alternate mailbox greeting, you are asked whether the mailbox can accept messages. Press **CHNG** or **1** to toggle from yes to no or press **OK** or **#** to accept.
- 6 Press **END** to end the session.



**Note:** If you choose a greeting that is not yet recorded, you are transferred back to the Greeting Options menu to record the greeting.

---

## Recording a Personalized mailbox greeting

If your company subscribes to a CLID service, you can record a Personalized mailbox greeting. For more information about CLID, ask your System Administrator. A Personalized mailbox greeting plays only for a person calling from the telephone number that you designate. For the Personalized mailbox greeting to play, the telephone number you enter must match the caller's phone number exactly.

You can record up to three Personalized mailbox greetings, but you can assign each greeting to only one telephone number.

If you record a Personalized greeting, program your mailbox to receive messages and choose an Alternate mailbox greeting, the Personalized greeting takes precedence over any other greetings. If you program your mailbox not to receive messages and choose an Alternate mailbox greeting, the Alternate mailbox greeting takes precedence over any other greeting, including Personalized mailbox greetings.

### To record a Personalized mailbox greeting

- 1 Press **☰** **9** **8** **1**.  
Follow the voice prompts or the display button options on your telephone to open your mailbox.
- 2 If you use the CallPilot interface:
  - Press **8** **2** to open the Greetings Options menu
  - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **8**
- Press **GREET** or **2**
- Go to step 3

```
Greeting options
REC  CHOOSE  CFWD
```

- 3 Press **REC** or **1**.

```
Greeting:
PRIME  ALT  PERS
```

- 4 Press **PERS** or **3** to record a Personalized mailbox greeting.

```
Greeting:
RETRY  OK
```


- 5 Enter a Personalized greeting number of 1, 2, or 3.

```
Ph:<none>
CHNG  OK
```

- 6 Press **CHNG** or **1**.

```
Ph:
RETRY  OK
```

 
- 7 Enter the phone number (maximum 10 digits) that you are assigning the Personalized mailbox greeting to. Press **OK** or **#** to accept the phone number.

- Record greeting:**  
RETRY OK
- 8** At the tone, record the greeting and press **OK** or **#** to end the recording.
- Accept greeting?**  
RETRY PLAY OK
- 9** Press **OK** or **#** to accept the recording or press **PLAY** or **1** to listen to the greeting or press **RETRY** or **2** to rerecord the greeting.
- 10** Press  to end the session.

## Deleting a Personalized mailbox greeting


If you no longer need a Personalized mailbox greeting, you can delete it.

### To delete a Personalized mailbox greeting

- 1** Press  **9** **8** **1**.
- Follow the voice prompts or the display button options on your telephone, to open your mailbox.
- 2** If you use the CallPilot interface:
- Press **8** **2** to open the Greetings Options menu
  - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **8**
- Press **GREET** or **2**
- Go to step 3

- Greeting options**  
REC CHOOSE CFWD
- 3** Press **REC** or **1**.
- Greeting:**  
PRIME ALT PERS
- 4** Press **PERS** or **3** to choose a Personalized mailbox greeting.
- Greeting:**  
RETRY OK
- 5** Enter the Personalized greeting number (1, 2, or 3) that you want to delete.
- Ph: XXXXXXXX**  
CHNG DEL OK
- 6** Press **DEL** or **2** to delete the greeting.
- 7** Press  to end the session.



---

## Chapter 6

# Accessing your messages

---

This chapter describes how to access your messages and explains:

- [Receiving calls](#)
- [Never Full mailbox feature](#)
- [Playing your messages](#)
- [Retrieving erased messages](#)
- [Screening your calls](#)
- [Interrupting a caller](#)

## Receiving calls

CallPilot can be used by outside callers and other mailbox owners in your company. When you are away from the office, you can use CallPilot with any tone dial telephone. When you are at the office, you can use CallPilot from any telephone connected to your company's CallPilot system.

Even outside callers who use a rotary dial telephone can use CallPilot. If a caller uses CallPilot from a rotary dial telephone, the system transfers the call to your company receptionist or the Operator. If the receptionist or Operator is not available to answer the call, the call transfers to the General Delivery Mailbox. Callers can leave messages that are the minimum message length that is configured for your system. The minimum message length can be between 0.5 to 3 seconds long. The maximum message length depends on your mailbox settings. Ask your System Administrator what your minimum and maximum message lengths are.

## Never Full mailbox feature

The Never Full mailbox feature lets external callers leave a message in your mailbox, even if the mailbox is technically "full". The message is stored in your mailbox, but you cannot access it until you delete at least one existing message to allow space for the new message. If you attempt to listen to any new messages before deleting an existing message, you hear this voice announcement:

*"Your mailbox is full. You must erase some messages before you can listen to new messages."*

If your mailbox is full, you cannot leave a message in another mailbox, create a new message, copy, send, or reply to a message until you delete at least one existing message.

The Never Full mailbox feature is not available to internal callers. Internal callers cannot leave messages in mailboxes that are technically "full".

## Playing your messages

 
Use the procedure for playing your messages that corresponds to the interface you use:

- “To play your messages - Norstar Voice Mail” on page 38
- “To play your messages - CallPilot” on page 40

### To play your messages - Norstar Voice Mail

Use this procedure if you use the Norstar Voice Mail interface.

- 1 Press 9 8 1. Follow the voice prompts or the display button options on your telephone, to open your mailbox.



- 2 Press **PLAY** or to listen to your messages. For other options, refer to the table “Playing your messages - Norstar Voice Mail” on page 38.
- 3 Press to end the session.

The table “Playing your messages - Norstar Voice Mail” shows the message options available to you during and after playing messages.

Playing your messages - Norstar Voice Mail				
Option	Button	Available while playing	Available after playing	Description
Back up	or <<<	✓		Rewinds the message nine seconds and resumes playing it.
Copy	or <b>COPY</b>	✓	✓	Sends a copy of the message to one or more mailboxes. If you record an introduction, it must longer than three seconds.
End of Message	or >>> >>>	✓		Goes to the end of the message.
Envelope		✓	✓	Plays the information in the message envelope. Envelope information includes the date and time the message was sent and, if the message is internal, the directory name of the sender.
Erase	or <b>ERASE</b>	✓	✓	Deletes the message currently playing. If no messages are playing, deletes the last message played. Deleted messages remain in your mailbox until the session is ended. (Refer to Notes 1 and 2 on <a href="#">page 40</a> .)

Playing your messages - Norstar Voice Mail				
Option	Button	Available while playing	Available after playing	Description
Skip forward	<b>3</b> or <b>&gt;&gt;&gt;</b>	✓		Advances the message nine seconds and continues playing from that point. A message can be forwarded as many times as required.
Next	<b>6</b> or <b># #</b>	✓	✓	Plays the next message in the mailbox. If you use this while a message is playing, it stops playing the current message and plays the next message in your mailbox.
Pause/Continue	<b>2</b> or <b>STOP</b> <b>PLAY</b>	✓		Temporarily stops a message. When you stop the message, you can play the previous message, continue playing the current message, or skip to the next message.
Previous	<b>4</b>	✓	✓	Stops playing the current message and plays the previous message.
Quit	<b>*</b>		✓	Stops playing the message and plays the Mailbox main menu options.
Replay	<b>1 1</b> or <b>&lt;&lt;&lt; &lt;&lt;&lt;</b>	✓		Replays the message from the beginning.
Replay	<b>1</b>		✓	Replays the last message.
Reply	<b>9</b> or <b>REPLY</b>	✓	✓	Replies to a message. (Refer to Note 3 on <a href="#">page 40</a> ) The reply can be either: - a message to an internal sender's mailbox - a telephone call to an internal or external party (Refer to Note 4 on <a href="#">page 40</a> .)
Save Message	<b>7 7</b> or <b>SAVE</b>	✓		Saves the message being played. (If you do not delete a message, it is automatically saved). This option is not shown on the display unless you erase a message. If you erase a message and try to play the message again, you can press <b>SAVE</b> on a two line display telephone. (Refer to Note 2 on <a href="#">page 40</a> .)
Volume Control	<b>*</b>	✓		Adjusts the volume of the message that is playing. The volume increases each time you press <b>*</b> . After four presses, the volume returns to the lowest level.

## Notes:

- 1 Because your mailbox has limited message storage space, delete any messages you no longer need. After a certain time period, your saved messages are erased automatically. Ask your System Administrator about this.

- 2 You can retrieve a deleted message only if you have not quit the session in which you deleted it. For information about retrieving deleted messages refer to [“Retrieving erased messages” on page 42](#)”.
- 3 You can always use the Reply feature to reply to an internal caller. The Reply feature can be disabled by your System Administrator for external and network messages.
- 4 You can reply to an outside caller by dialing them back if your company subscribes to Caller ID (CLID) service. For further information about replying to an outside caller refer to [“Replying to an external caller” on page 58](#).

## To play your messages - CallPilot

- 1 Press 9 8 1 .  
Follow the voice prompts or the display button options to open your mailbox.

A voice prompt announces the number of new and saved messages that you have.

No messages		
COMP	MBOX	EXIT

- 2 You can play any message that you want to listen to.  
Press to play the current message.  
For other message commands, refer to the table [“Playing your messages - CallPilot”](#).
- 3 Press to end the session.

The table [“Playing your messages - CallPilot”](#) shows the message options that are available to you during and after playing messages.

Option	Button	Available during and after playing	Description
Skip Back			Rewinds the message five seconds and resumes playing it at that point.
Skip Forward			Advances the message five seconds and continues playing from that point.
Previous Message			Stops playing the current message and plays the previous message.
Next Message			Plays the next message in the skillset mailbox. If you use this while a message is playing, it stops playing the current message and plays the next message in your mailbox.
Call Sender			Places a call to the sender of a message.



Playing your messages - CallPilot			
Option	Button	Available during and after playing	Description
Help	*	✓	Offers a Help menu.
Reply	7 1	✓	Replies to a message.
Envelope	7 2	✓	Plays the information in the message envelope. Envelope information includes the date and time the message was sent and, if the message is internal, the directory name of the sender.
Forward Message	7 3	✓	Forwards the message to one or more mailboxes. You can record an introduction to the forwarded message.
Reply All	7 4	✓	Replies to a message and all other recipients of the message. (Refer to Note 3 on <a href="#">page 40</a> .)
Delete	7 6	✓	Deletes the current message. Deleted messages remain in your mailbox until the session ends. (Refer to Notes 1 and 2 on <a href="#">page 40</a> .)

## Retrieving erased messages

You can retrieve an erased message if you are still in the CallPilot session. An erased message remains in your mailbox until you end the current CallPilot session.

After you play your messages and exit CallPilot, any messages that you do not erase are saved. Since message storage space is limited, we recommend that you erase messages that you no longer need.

### To retrieve an erased message - Norstar Voice Mail

After you erase a new or saved message, the number of new or saved messages shown on the display is decreased by one. Even though the display shows 0 new 0 saved, you can still play and retrieve your erased messages. Press **PLAY** or **2** to listen to your erased message, then press **7 7** to restore the message to your mailbox.

### To retrieve an erased message - CallPilot

You can retrieve a deleted message. A deleted message remains in your mailbox until you end the current CallPilot session. Locate the deleted message. Press **7 6** to restore the message.

After you play your erased message, you can restore it. If you end the current session without restoring the erased message, it is permanently erased from CallPilot.

## Screening your calls

With Call Screening you can determine who is calling before you accept the call. Call Screening applies only to external calls transferred from the Auto Attendant or from Custom Call Routing (CCR). See your System Administrator for information on CCR.

You can use Call Screening if:

- Caller ID (CLID) is not available
- Caller ID is not a reliable indication of the caller identity
- your telephone does not have display capabilities

If Call Screening is enabled, CallPilot asks the caller to record their name after the tone. (If the caller presses  when they are asked to record their name, the call goes back to the Auto Attendant.) The caller hears a hold tone while they wait. If you do not answer, the call transfers to your mailbox.

Since some callers do not like to record their name and wait for service, use this feature with discretion.

### To use Call Screening

- 1 You receive an external call that is transferred from the Auto Attendant or from Custom Call Routing (CCR).
- 2 CallPilot announces the caller's name to you.  
If the caller does not record their name, the voice prompt says, "*Unknown caller.*"
- 3 You can answer the call or let the caller leave a message in your mailbox:
  - press **ANS** or  to answer the call
  - press **QUIT** or  to transfer the call to your mailbox.

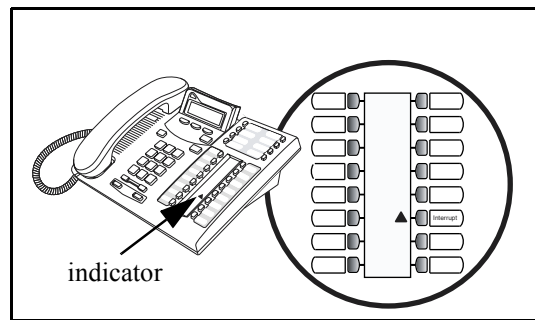
## Interrupting a caller

With the Interrupt feature (☎ 9 8 7) you can intercept a caller who is listening to your mailbox greeting or leaving a message. You can program the Interrupt feature to a memory button with an indicator on your Nortel Networks telephone. For more information about programming a feature to a memory button, refer to [“Programming a memory button with a feature code”](#) on page 24.

When you interrupt a caller who is leaving a message in your mailbox, any part of the message that was recorded remains in your mailbox. Remember to delete this message from your mailbox.

### To interrupt a caller

- 1 While a caller is listening to your mailbox greeting or leaving a message, the indicator (▶ or ▲) flashes on your telephone.
- 2 Press the Interrupt button or press ☎ 9 8 7 to speak with the caller.



**Note:** The indicator flashes quickly if the caller is listening to your greeting.

The indicator flashes slowly if the caller is leaving a message.

---

---

## Chapter 7

# Sending messages

---

This chapter describes how to send messages and explains:

- [Recording and sending messages](#)
- [Searching the Company Directory](#)
- [Assigning message delivery options](#)
- [Sending a message to more than one recipient](#)
- [Replying to messages](#)
- [Placing a call with Thru-Dial](#)

## Recording and sending messages

The messages you record must be longer than three seconds. The system times out after five seconds of silence.

You can record and send messages using:

- the Open Mailbox feature
- the Leave Message feature

When you use the Open Mailbox feature, you open your personal mailbox and enter your password. Then you record your message and enter the mailbox number of the message recipient.

When you use the Leave Message feature, you enter the extension of the message recipient immediately. Then you record your message. You do not enter your password or open a mailbox.

When you record and send messages you can:

- search the Company Directory  
refer to [“Searching the Company Directory”](#) on page 50
- assign message delivery options  
refer to [“Message delivery options”](#) on page 51
- send a message to more than one recipient  
refer to [“Sending a message to more than one recipient”](#) on page 55

Use the procedures that apply to your interface:

- [“To record and send a message using the Open Mailbox feature - Norstar Voice Mail”](#) on page 46
- [“To record and send a message using the Open Mailbox feature - CallPilot”](#) on page 47
- [“To record and send a message using the Leave Message feature - Norstar Voice Mail”](#) on page 48
- [“To record and send a message using the Leave Message feature - CallPilot”](#) on page 48

## To record and send a message using the Open Mailbox feature - Norstar Voice Mail

- 1 Press **[\*] 9 [8] 1**.  
Follow the voice prompts or the display button options on your telephone to open your mailbox.

```
0 new 0 saved
PLAY REC ADMIN
```

- 2 Press **REC** or **[3]** and record your message at the tone.

```
Record message
RETRY PAUSE OK
```

- 3 Record your message.

Press **PAUSE** or **[2]** to pause your message.  
When you wish to resume recording, press **CONT** or **[2]** to continue recording your message.

Press **OK** or **[#]** to end your recording  
or  
press **RETRY** to erase and re-record your message.

```
Accept rec?
RETRY PAUSE OK
```

- 4 Press **OK** or **[#]** to accept your message  
or  
press **PLAY** or **[1]** to listen to your message  
or  
press **RETRY** or **[2]** to erase and re-record your message.

```
Mbox:
DIR QUIT
```

- 5 Enter the mailbox number or the Group List number  
or  
press **DIR** or **[#]** to search the Company Directory.

```
Smith, Pat
OPTS CC SEND
```

- 6 Press **SEND** or **[#]** to send the message now with the Normal delivery option  
or  
press **CC** or **[4]** to send this message to more than one mailbox owner, with one set of delivery options applied to all recipients.  
The display shows the name of the mailbox owner or Group, in this example, mailbox owner Pat Smith.
- 7 If you want to assign delivery options, see [“To assign message delivery options - Norstar Voice Mail”](#) on page 52  
or  
press **[\*]** to end the session.

## To record and send a message using the Open Mailbox feature - CallPilot

- 1 Press **[\*] 9 8 1**.  
Follow the voice prompts or display options to open your mailbox.
- 2 Press **COMP** or **[7] [5]** to enter the Compose Message option.
- 3 Enter the mailbox number or Group List address and press **#**  
or  
press **NAME** or **[1] [1]** to search the Company Directory and go to step 5.  
(The default to search the Company Directory is **[1] [1]**. The System Administrator can change this number.)
- 4 Press **OK** or **#** to accept the address  
or  
press **RETRY** to enter a new mailbox address and go to step 3.
- 5 Press **DONE** or **#** when you are finished entering addresses.
- 6 Press **REC** or **[5]** and record your message at the tone.
- 7 Press **OK** or **#** to end your recording  
or  
press **REREC** to erase and re-record your message.
- 8 Press **PLAY** or **[2]** to listen to your message  
or  
press **SEND** or **[7] [9]** to send the message now with the Normal delivery option  
or  
press **DEL** or **[7] [6]** and press **[5]** to erase and re-record the message.
- 9 If you want to assign delivery options see [“To assign message delivery options - CallPilot” on page 53](#)  
or  
press **[\*]** to end the session.

To:  
NAME SPEC DONE

To: XXXX  
RETRY OK

To:  
NAME SPEC DONE

EMPTY  
REC

Recording....  
REREC OK

Rec stopped  
PLAY DEL SEND

## To record and send a message using the Leave Message feature - Norstar Voice Mail

- 1 Press **[\*] 9 8 0**.
- 2 Enter the mailbox number or Group List number. If you do not know the mailbox number, press **DIR** or **#** to use the Company Directory.
 

Mbox  
 DIR                      QUIT
- 3 When you hear the tone, record your message. You can press **PAUSE** or **[2]** to stop your recording and press **CONT** or **[2]** to continue recording your message or press **RETRY** to erase and re-record your message.
 

Record message:  
 RETRY   PAUSE   OK
- 4 Press **OK** or **#** to end your recording.
 

Record message:  
 RETRY   PAUSE   OK
- 5 Press **SEND** or **#** or replace the handset to send the message using the Normal delivery option or press **PLAY** or **[1]** to listen to your message or press **RETRY** or **[2]** to erase and re-record your message or press **[3]** to change the delivery options.
 

Message options:  
 RETRY   PLAY   SEND

## To record and send a message using the Leave Message feature - CallPilot

- 1 Press **[\*] 9 8 0**.
- 2 Enter the mailbox address or Group List address. Press **NAME** or **[1] [1]** to use the Company Directory.
 

To:  
 NAME                      DONE
- 3 Press **OK** or **#** to accept the address. Press **RETRY** to enter a new mailbox address.
 

To: XXXX  
 RETRY                      OK
- 4 Record your message at the tone.
 

<xxxx>
- 5 Press **OK** or **#** to end your recording or press **REREC** to erase and re-record your message.
 

Recording....  
 REREC                      OK



Rec stopped  
PLAY DEL SEND

- 6** Press PLAY or **2** to listen to your message  
or  
press SEND or **7** **9** to send the message now with the Normal  
delivery option  
or  
press DEL or **7** **6** to erase and re-record your message.

## Searching the Company Directory

If you know the name but not the mailbox number of someone you want to send a message to, you can search the Company Directory. You can find any initialized mailbox by searching the Company Directory. By default, you can press **1** **1** to search the Company Directory, but the System Administrator can change the dialpad buttons.

If the Company Directory is not enabled:

- the **DIR** display option does not appear on the display
- you do not hear a the voice prompt that announces the dialpad buttons to press for the Company Directory

### To search the Company Directory

1 Press **6** **9** **8** **0**.

2 Press **DIR** or **#** to search the Company Directory.

Last name: OK

3 Use the dialpad buttons associated with the first three or four letters of the mailbox owner's name to locate and select the person's mailbox.

Enter the last name, first name or both names depending on how your system is set up.

This display shows an example of a prompt for a mailbox owner's last name. For example, to enter the letters "Wayn" enter

**9** **2** **9** **6**.

Wayne, Paul  
RETRY NEXT OK

4 In this example, the name of the mailbox owner, Paul Wayne appears on the display and is announced. To accept the mailbox owner, press **OK** or **#**

or

if you do not want the person who is shown, press **NEXT** or **1** to see the next matching name.

Wayne, Paul


5 The greeting of the mailbox owner plays. If the mailbox owner you select does not have a Personal greeting recorded and selected, you hear their Company Directory recording.

## Assigning message delivery options

Use the procedure for the interface you use:

- “To assign message delivery options - Norstar Voice Mail” on page 52
- “To assign message delivery options - CallPilot” on page 53

### Message delivery options

Option	Display button	Norstar Voice Mail dialpad button	CallPilot dialpad button	Description
Normal	<u>SEND</u>	# 	7 9	Sends a message with a Normal delivery option.
Certified/Acknowledge	<u>CERT</u> or <u>ACK</u>	1	5	Sends you notification that your message has been received and played.
Urgent	<u>URGENT</u> or <u>URG</u>	2	1	Plays messages marked Urgent before other messages in the mailbox. Urgent messages are preceded by the voice prompt, “ <i>This message is urgent</i> ”.
Other	<u>OTHR</u>			Accesses the Private and Timed delivery options. If <u>PRIV</u> or <u>ACK</u> appears instead of <u>OTHR</u> , the Timed delivery option is not available.
Private	<u>PRIV</u>	3	4	Private messages cannot be forwarded to another mailbox.
Timed	<u>TIME</u> or <u>TIMED</u>	4	6	Lets you assign a delivery time to the message.

The Certified/Acknowledge and Timed delivery options are available only if you call from a telephone that has a mailbox associated with it. Messages sent with the Timed delivery option are delivered at the time that you specify.

If you use the Timed delivery option, you first enter the time, including a.m. or p.m. You are then prompted to accept or change the date, which defaults to today or tomorrow, and you can accept the date that corresponds to the next occurrence of the specified time. Dates are shown by month and day, and the year is inferred. If the month and day are earlier than the current date, the next year is assumed. When the specified time and date occurs, the message is sent. You cannot cancel the message prior to delivery.

## To assign message delivery options - Norstar Voice Mail

- Record your message using  
[“To record and send a message using the Open Mailbox feature - Norstar Voice Mail”](#) on page 46  
 or  
[“To record and send a message using the Leave Message feature - Norstar Voice Mail”](#) on page 48.

```
wayne, Pat
OPTS  CC  SEND
```

- Press **OPTS** for delivery options.

```
Delivery options
CERT  URGENT  OTHR
```

- Press **CERT** for Certified delivery and go to step 9  
 or  
 press **URGENT** for Urgent delivery and go to step 9  
 or  
 press **OTHR** for Timed or Private delivery and go to step 4. If **PRIV** appears on the third display button, the Timed delivery option is not available.

If you are using a one line display phone, press **3** for Private delivery or press **4** for Timed delivery.

```
Delivery options
PRIV  TIME
```

- Press **PRIV** or **3** to send a message with a Private delivery option and go to step 9  
 or  
 press **TIME** or **4** to set up a delivery time for the message.

```
Time hh:mm
RETRY
```

- Enter the time that you want to send a message using the Timed delivery option.  
 This is a four digit field. Any single-digit hour or minute must be preceded by a zero. For example, enter 0800 for eight o'clock.

```
hh:mm
RETRY  AM  PM
```

- Press **AM** or **1**  
 or  
**PM** or **2**.

```
hh:mm am/pm
RETRY  OK
```

- Press **OK** or **#** to accept the time you entered or press **RETRY** or **\*** to change the time.

```
Tu mm dd
CHNG  NXTDAY  OK
```

- Press **CHNG** or **1** to change the date shown to a different date.  
 Press **NXTDAY** to change the date to the next day (the day after the date that is shown).  
 Press **OK** or **#** to accept the date shown, which defaults to today or tomorrow, and select the one that corresponds to the next occurrence of the specified time.

```
Wayne, Pat
OPTS  CC  SEND
```

- 9 Press SEND or **#** to send the message now or press **\*** to cancel all delivery options.

```
0 new 8 saved
PLAY  REC  ADMIN
```

- 10 Press **☎** to end the session.

For more information about the message delivery refer to “[Message delivery options](#)” on page 51.

## To assign message delivery options - CallPilot

- 1 Record your message using “[To record and send a message using the Open Mailbox feature - CallPilot](#)” on page 47 or “[To record and send a message using the Leave Message feature - CallPilot](#)” on page 48.

- 2 Press **7 0** for message options. This is a voice prompt option and does not appear as a display button option.

```
Msg options
URG  PRIV  OTHR
```

- 3 Press URG or **1** for Urgent delivery and go to step 9 or press PRIV or **4** for Private delivery and go to step 9 or press OTHR for Acknowledged or Timed delivery and go to step 4. If ACK appears on the third display button, the Timed delivery option is not available.

If you are using a one line display phone, press **5** for Private delivery or press **6** for Timed delivery.

```
Msg options
ACK  TIME
```

- 4 Press ACK or **5** to send a message with a Private delivery option and go to step 9 or press TIME or **6** to set up a delivery time for the message.

```
Time hhmm:
RETRY
```

- 5 Enter the time that you want to send a message using the Timed delivery option. This is a four digit field. Any single-digit hour or minute must be preceded by a zero. For example, enter 0800 for eight o’clock.

```
hh:mm
RETRY  AM  PM
```

- 6 Press AM or **1** or PM or **2**.


hh:mm am/pm  
RETRY OK

**7** Press **OK** or **#** to accept the time you entered or press **RETRY** or **\*** to change the time.

Tu mm dd  
CHNG NXTDAY OK

**8** Press **CHNG** or **1** to change the date shown to a different date. Press **NXTDAY** to change the date to the next day (the day after the date that is shown). Press **OK** or **#** to accept the date shown, which defaults to today or tomorrow, and select the one that corresponds to the next occurrence of the specified time.

**9** Press **7 9** to send this message now  
or  
press **7 0** to cancel all delivery options.

**10** Press **** to end the session.

## Sending a message to more than one recipient

### Sending a message to a Group List

A Group List is a list of mailbox owners. If you have a group of people that you frequently send messages to, you can send the message to a Group List. When you send a message to a Group List, each mailbox owner in the Group List receives the same message. If you are a member of the group you are addressing, you do not receive a copy of the message.

If you need a Group List, ask your System Administrator to create one for you. Tell the System Administrator:

- the mailbox owners' names
- a list of the mailbox numbers
- the Group List name

Your System Administrator can publish a list of the mailboxes in each Group List.

#### If you know the number of the Group List:

- and you use the Norstar Voice Mail interface, you can enter the Group List number instead of a mailbox number at the **Mb**ox: prompt
- and you use the CallPilot interface, you can enter the Group List number instead of a mailbox number at the **To**: prompt

#### If you know the name of the Group List:

- and you use the Norstar Voice Mail interface, enter the name of the Group List in the Company Directory at the **DIR** prompt
- and you use the CallPilot interface, enter the name of the Group List in the Company Directory at the **NAME** prompt

### Forwarding a copy of a message to one or more recipients

You can forward a copy of a message during or after playing the message. When you forward a copy of a message to a mailbox, you can record an introduction to the message. If you use the Norstar Voice Mail interface, your introduction must be at least three seconds long.

After you record an introduction to the message and enter the mailbox number, your introduction and a copy of the message are automatically sent to the mailbox you selected. You can then send an additional copy of the introduction and the message to another mailbox, or quit and return to the Listen to Messages menu. You can forward copies to as many mailboxes as you like.



**Note:** You cannot forward Private messages.

---

For more information on forwarding your messages, refer to [“Norstar Voice mail mailbox options” on page 25](#) and [“CallPilot mailbox options” on page 27](#).

## Replying to messages

You can reply to internal and external callers. You can reply to a message from an external caller if your company subscribes to CLID.

Use the procedure for replying to messages that applies to the interface you use:

- “To reply to an internal caller - Norstar Voice Mail” on page 56
- “To reply to an internal caller - CallPilot” on page 57

### Replying to an internal caller

If you use	and you want to	press
Norstar Voice Mail	reply to the caller's extension	<u>CALL</u> to transfer to the internal caller's extension.
	leave a message in the caller's mailbox	<u>MSG</u> to record and send a reply to the internal caller's mailbox.
CallPilot	reply to the caller's extension	<u>Call Sender</u> <b>9</b> to transfer to the internal caller's extension.
	leave a message in the caller's mailbox	<u>Reply</u> <b>7</b> <b>1</b> to record and send a reply to the internal caller's mailbox.

### To reply to an internal caller - Norstar Voice Mail

- 1 Press **9** **8** **1**.  
Follow the voice prompts or the display button options to open your mailbox.

```
1 new 0 saved
PLAY REC ADMIN
```

- 2 Press PLAY or **2**.

```
End of message
REPLY ERASE NEXT
```

- 3 After you listen to the message, press REPLY or **9**.

```
Reply to msg
MSG CALL QUIT
```

- 4 Press CALL or **2** to call the caller  
or  
press MSG or **1** to record and send a reply.



## To reply to an internal caller - CallPilot

- 1** Press      
Follow the voice prompts or the display button options on your telephone to open your mailbox.
  
- 2** A mailbox summary is announced.  
While you are in your message list, you can play any message.
  
- 3** Press  to play the current message.
  
- 4** Press  to call the caller  
or  
press   to record and send a reply.

## Replying to an external caller

You can reply to a message from an external caller if your company subscribes to CLID. Before using the Reply option you must play the message. To use the Reply feature, it must be set up for your telephone. If you cannot use the Reply feature, contact your System Administrator.

Use the procedure that applies to the interface you use:

- “To reply to an external caller - Norstar Voice Mail” on page 58
- “To reply to an external caller - CallPilot” on page 58

### To reply to an external caller - Norstar Voice Mail

- 1 Press **[\*] 9 8 1**.  
Follow the voice prompts or the display button options to open your mailbox.

1 new 0 saved  
PLAY REC ADMIN

- 2 Press **PLAY** or **[2]**.

End of message  
REPLY ERASE NEXT

- 3 After you listen to the message, press **REPLY** or **[9]**.  
CallPilot dials the external number directly.

### To reply to an external caller - CallPilot

- 1 Press **[\*] 9 8 1**.  
Follow the voice prompts or the display button options to open your mailbox.
- 2 A mailbox summary is announced.  
While you are in the message list you can play any message.
- 3 Press **[2]** to play the current message.
- 4 Press **[9]** to call the caller.  
CallPilot dials the external number directly.

## Placing a call with Thru-Dial

With Thru-Dial you can call another number while you are logged on to your mailbox, or if you call someone's extension and reach their voicemail.



**Note:** The System Administrator can restrict the numbers that you can dial, so ask your System Administrator if you can use Thru-Dial.

### When to use Thru-Dial

When you are making a call, you can make a second call without hanging up and dialing a second number by using Thru-Dial. This is especially useful if you are at a pay phone.

Use Thru-Dial if you want callers to be able to dial another number to reach your Target Attendant, (which you can change to be an out-of-office number) or maybe another contact person if you're not available.

When you are making calls from a hotel you can avoid toll charges by using Thru-Dial to call other extensions from one call.

#### *Examples of using Thru-Dial*

- Pat calls her mailbox from a pay phone and hears an urgent message from Joe. Without hanging up, Pat can Thru-Dial Joe's number and doesn't have to pay for another call.
- Pat is away from the office and needs to leave messages for Jill and Bob in the office. Pat can call Jill's mailbox, leave a message, then Thru-Dial to Bob and leave a message.
- Pat calls Doris and gets her voicemail. Pat knows that Andy can provide the information she needs, so Pat Thru-Dials to Andy from Doris' mailbox.

### To place a Thru-Dial call

- 1 Open your mailbox:
  - If you are calling remotely press **\*** **\*** during your greeting to open your mailbox. If you are in Europe or Australia press **8** **8**. Follow the voice prompts to enter your mailbox number and password.
  - If you are calling from your Nortel Networks phone press **☛** **9** **8** **1**. Follow the voice prompts or the display buttons to open your mailbox.
- 2 Press **0**, followed immediately by the extension number you want to call. Do not pause for more than two seconds while you are entering the number.

## To search the Company Directory while placing a Thru-Dial call

If you enter a name instead of a number with Thru-Dial, CallPilot places the call as soon as it finds a match for the name.

### 1 Open your mailbox:

- If you are calling remotely press **\*** **\*** during your greeting to open your mailbox. If you are in Europe or Australia press **8** **8**. Follow the voice prompts to enter your mailbox number and password.
- If you are calling from your Nortel Networks phone press **☛** **9** **8** **1**. Follow the voice prompts or the display buttons to open your mailbox.

### 2 If you use the CallPilot interface:

Press **0**, followed immediately by **1** **1** to search the Company Directory. This is the default Company Directory number. The System Administrator can change the Company Directory number. If you don't know the number, press **\***.

If you use the Norstar Voice Mail interface:

Press **0**, followed immediately by **#** to search the Company Directory.

### 3 Enter the last name, then the first, until your call is placed.

For instructions on entering the name, refer to [“Searching the Company Directory” on page 50](#).

## To use Thru-Dial to reach your Target Attendant

Your Target Attendant is the number of the person your callers reach when they press zero.

### 1 Open your mailbox:

- If you are calling remotely press **\*** **\*** during your greeting to open your mailbox. If you are in Europe or Australia press **8** **8**. Follow the voice prompts to enter your mailbox number and password.
- If you are calling from your Nortel Networks phone press **☛** **9** **8** **1**. Follow the voice prompts or the display buttons to open your mailbox.

### 2 Press **0**, then wait for the call to be answered by your Target Attendant.

For information on setting up a Target Attendant refer to [“Assigning a Target Attendant” on page 22](#).

---

## Chapter 8

# Call Forwarding your calls

---

You can call forward your calls if you want your calls to go to CallPilot immediately, without ringing at your extension. For example, you can set up Call Forwarding if you are not going to be in the office and you do not want your ringing phone to disturb your colleagues, or if you do not want to take calls while you are working. While Call Forward is on, callers can leave a message for you without having to wait for the phone to ring several times.

This chapter explains the following ways you can forward your calls:

- [Call Forwarding your calls to your mailbox](#)
- [Setting up Call Forward remotely](#)
- [Call Forward with Caller ID](#)

## Call Forwarding your calls to your mailbox

To forward incoming calls to your mailbox, press **[☎] 9 8 4**.

To cancel Call Forward, do one of the following:

- press **[☎] 9 8 4** again
- press **[Call Fwd.]**
- press **[☎] # 4**
- press **CANCEL**

## Setting up Call Forward remotely

When you are away from the office you can forward your calls to your mailbox by using the dialpad of any tone dial telephone.



**Note:** You can set up Call Forward remotely only if you use the Norstar Voice Mail interface. You cannot set up Call Forward remotely if you use the CallPilot interface.

---

### To set up Call Forward remotely

- 1 Call the Automated Attendant or your business telephone from any tone dial telephone.
- 2 While the greeting plays enter the CallPilot extension number or press    
If you are in Europe or Australia enter the CallPilot extension number or press  .
- 3 Follow the voice prompts to open your mailbox.
- 4 Press  .
- 5 Press  to open the Call Forward menu.
- 6 Press  to turn Call Forward on or off.
  - If Call Forward is on, the voice prompt says *“Calls will be answered immediately.”*  
All calls to your telephone are now answered by CallPilot.
  - If Call Forward is off, the voice prompt says *“Calls will ring at your set.”*
- 7 Press  to turn Call Display on or off.
  - If Call Display is on, the voice prompt says *“Caller information will be displayed at your set.”*
  - If Call Display is off, the voice prompt says *“Caller information will not be displayed.”*
- 8 Replace the handset to end the session.

## Call Forward with Caller ID

The Call Forward with Caller ID (CLID) feature is available only if your company subscribes to a CLID service. If you are not sure whether your company subscribes to a CLID service, ask your System Administrator. CLID does not appear if the caller has a private or unknown telephone number.

You can set up Call Forward with CLID to screen calls forwarded to your mailbox. If the feature is enabled, you hear an Alert tone and the CLID information appears on the telephone display.

To talk to a caller who is forwarded to your mailbox, press **[\*] 9 [8] 7** to interrupt the call.

### To turn Call Forward with CLID on or off

- 1 Press **[\*] 9 [8] 1**.  
Follow the voice prompts or the display button options on your telephone to open your mailbox.

- 2 Press **ADMIN** or **[8]**.  
Press **GREET** or **[2]**.

```
Greeting options:
REC  CHOOSE  CFWD
```

- 3 Press **CFWD** or **[3]**.

```
Forward calls?
YES    NO
```

- 4 Press **YES** or **[1]** to have your calls go to CallPilot without ringing at your phone  
or  
press **NO** or **[2]** to have calls ring at your set.

```
Display caller:Y
CHNG          QUIT
```

- 5 Press **CHNG** or **[1]** to turn Call Display on or off.

- 6 Press **[\*]** to end the session.

### Call Forward on Busy overrides CLID

If your display telephone is assigned Call Forward on Busy, CLID information does not appear on the display. Call Forward on Busy is a feature that forwards your calls to another designated telephone or extension if your telephone is busy. Call Forward on Busy is assigned by the System Administrator.





---

## Chapter 9

# Transferring calls

---

This chapter describes transferring calls and explains:

- [Transferring calls to a CallPilot mailbox](#)
- [Transferring a mailbox owner's call to their mailbox](#)
- [Transferring a call to Custom Call Routing \(CCR\)](#)
- [About Outbound Transfer](#)
- [Setting up Outbound Transfer](#)
- [Adding special characters to a destination number](#)
- [Turning Outbound Transfer on or off](#)
- [Optimizing Outbound Transfer](#)

## Transferring calls to a CallPilot mailbox

With the Transfer feature **☎ 9 8 6** you can transfer a call from your business telephone directly to a mailbox on the CallPilot system.

Transferring calls to a CallPilot mailbox has these advantages:

- If you transfer a call to a mailbox instead of another telephone, the call does not come back to you. If you transfer a call to another telephone and the call is not answered, the call comes back to you.
- The call is immediately transferred to the mailbox, which saves time.

**☎ 9 8 6** is not available on the Companion Wireless telephone.

### To transfer a call to a mailbox from your telephone

- 1 Press **☎ 9 8 6**.  
Do not press Hold because the call is put on hold automatically.
- 2 Enter the mailbox number or search the Company Directory. To search the Company Directory press the **DIR** display option.
- 3 Wait until the display shows **Call transferred** before you attempt any other CallPilot functions. The call automatically transfers and the CallPilot session ends.

## Transferring a mailbox owner's call to their mailbox

You can transfer a mailbox owner's call to their CallPilot mailbox so that they can change their greetings or retrieve their messages.

### To transfer a mailbox owner's call to their mailbox

- 1 Press **[☎] 9] 8] 6]**.  
Do not press Hold because the call is put on hold automatically.
- 2 Enter the mailbox owner's mailbox number.
- 3 Wait until the display shows **Call transferred** before you attempt any other telephone features.



**Note:** Do not use **[☎] 7] 0]** to transfer a mailbox owner's call. This feature transfers the call to their telephone and it is possible that the call can return to you.

**[☎] 9] 8] 6]** is not available on a Companion Wireless telephone.

---

After a mailbox owner's call transfers to their mailbox, the mailbox owner must:

- 1 Press **[\*] [\*]** while their mailbox greeting plays.
- 2 Follow the voice prompts to open their mailbox.

## Transferring a call to Custom Call Routing (CCR)

CCR is a single-digit application that provides callers with a more sophisticated menu and a wider range of options than the Automated Attendant.

Callers can use CCR to:

- listen to the Home menu and make a selection
- listen to a pre-recorded CCR Information message
- leave a message in a mailbox
- transfer to another extension or an external number

For more information about CCR, ask your System Administrator.

You can transfer a call to the beginning of a CCR Tree.

### To transfer a call to a CCR Tree

- 1 Press **[☎] [9] [8] [6]**.  
Do not press Hold **[☺]** because the call is put on hold automatically.
- 2 Choose a CCR Tree by entering a digit from 1 to 8 and pressing **[#]**.
- 3 Wait until the display shows **Call transferred** before you attempt any other features.

## About Outbound Transfer

You can set up Outbound Transfer to transfer a caller who reaches your mailbox to a number that you assign. A caller can use Outbound Transfer from any tone dial telephone, and you can direct your Outbound Transfer calls to any telephone.

You can tell callers about this feature in your personal greeting. If you inform callers of this feature in your mailbox greeting, you must tell them what number to press to transfer:

- If you use the Norstar Voice Mail interface, tell callers to press **7**
- If you use the CallPilot interface, tell callers to press **9**

For example:

*“Hi. This is Brenda Whately. I’m away from the office today. Please leave me a message after the tone and I will return your call as soon as possible. If you need to reach me before tomorrow, press **7** and you will be transferred to my cell phone. Thanks.”*



**Note:** The restrictions that apply to your telephone line also apply to Outbound Transfer numbers. For example, if you cannot dial long distance telephone numbers from your telephone, you cannot have a long distance Outbound Transfer destination. If your mailbox is restricted to extension destinations for Outbound Transfer, see your System Administrator.

---

For Outbound Transfer to function properly, you must have a greeting recorded.

When you set up Outbound Transfer, you can add special characters to the destination number. Refer to [“Adding special characters to a destination number” on page 68](#) for more information.

## Adding special characters to a destination number

Special characters are pauses or other dialing instructions that you can add if they are required to access the network or a destination number.

Follow the voice prompts or press **ADD** to add special characters to a destination telephone number (or a destination pager number if you are setting up a destination pager number in Off-premise Message Notification.) A destination telephone or pager number cannot be longer than 30 characters.



**Note:** If you are adding special characters, do not press the dialpad buttons **#** to enter a #, or **\*** to enter a \*. Press the button directly below the option on a two line display telephone, or listen to the voice prompts.

---

Adding special characters to a destination number	
Press	Description
<b>2</b> or <u>DIGS</u>	to resume adding digits to the destination phone number
<b>3</b> or <u>PAUS</u>	to enter a timed pause that appears as P on the display. Pauses are four seconds long.
<b>4</b> or <u>TONE</u>	to recognize dial tone (behind PBX). The Recognize Dial Tone special character appears as D on the display.
<b>5</b> or <u>OTHR #</u>	to enter a #
<b>6</b> or <u>OTHR *</u>	to enter a *
<b>*</b>	to cancel and retry

## Setting up Outbound Transfer

### To set up Outbound Transfer to a phone number

- 1 Press **☐** **9** **8** **1** .  
Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **8** **0** to open the Mailbox Options
- Press **9** to open the Outbound Transfer menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press ADMIN or **8**
- Press **8** to open the Outbound Transfer menu
- Go to step 3

Outbound xfr  
ADMIN SELECT

- 3 Press ADMIN or **1** to set up Outbound Transfer  
or  
if you have previously set up Outbound Transfer press CHNG.

Destination:  
PHONE EXT

- 4 Press PHONE to select an external phone as the destination.

Ph:  
RETRY OK

- 5 Enter the destination phone number and press OK or **#** .

<x>  
ADD OK

- 6 Press **OK** or **#** to accept the destination number, represented by <x>  
or  
press **ADD** or **2** to add special characters. For information, refer to [“Adding special characters to a destination number” on page 68](#).  
After you add special characters, press **OK** or **#** to accept the destination number.

Transfer: off  
CHNG QUIT

- 7 Press **CHNG** or **1** to turn Outbound Transfer on.

Transfer: on  
CHNG QUIT

- 8 Press **QUIT** or **\***.  
9 Press **[Phone]** to end the session.

## To set up Outbound Transfer to an extension

- 1 Press **[6] [9] [8] [1]**.  
Follow the voice prompts or the display button options on your telephone to open your mailbox.
- 2 If you use the CallPilot interface:
- Press **[8] [0]** to open the Mailbox Options
  - Press **[9]** to open the Outbound Transfer menu
  - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[8]** to open the Outbound Transfer menu
- Go to step 3

Outbound xfr  
ADMIN SELECT

- 3 Press **ADMIN** or **1** to set up Outbound Transfer.

Ext:  
RETRY OK

- 4 Enter the destination extension and press **OK** or **#**.

Accept<x>  
RETRY OK

- 5 Press **OK** or **#** to accept the number.  
The <x> represents the extension.

Transfer: off  
CHNG QUIT

- 6 Press **CHNG** or **1** to turn Outbound Transfer on.

Transfer: on  
CHNG QUIT

- 7 Press **QUIT** or **\***.  
8 Press **[Phone]** to end the session.

## Turning Outbound Transfer on or off

You can turn Outbound Transfer on or off at any time after you set it up. Turning Outbound Transfer off does not affect any of its assigned parameters.

### To turn Outbound Transfer on or off

- 1 Press **[\*] 9 8 1**.  
Follow the voice prompts or the display button options on your telephone to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **[8] [0]** to open the Mailbox Options
- Press **[9]**
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[8]** to open the Outbound Transfer menu
- Go to step 3

```
Outbound xfr
ADMIN      SELECT
```

- 3 Press **SELECT** or **[2]** to access Outbound Transfer.

```
Transfer: off
CHNG      QUIT
```

- 4 Press **CHNG** or **[1]** to turn Outbound Transfer on.  
Press **CHNG** again to turn Outbound Transfer off.

```
Transfer: on
CHNG      QUIT
```

- 5 Press **QUIT** or **[\*]**.

- 6 Press **[\*]** to end the session.

## Optimizing Outbound Transfer

When CallPilot transfers a call to an external telephone number using Outbound Transfer, two lines are used. An incoming line connects a caller to a mailbox and an outgoing line transfers a caller to an Outbound Transfer telephone number. Both lines remain in use while the caller connects to the Outbound Transfer telephone number.

To optimize the use of CallPilot lines, the Outbound Transfer call to an external telephone number can transfer to the incoming line to make the outgoing call. This type of transfer is called a Link transfer.



**Note:** You can perform a Link transfer only if the CallPilot line is equipped with Link transfer capability. The most common type of line that supports Link transfer is a Centrex line. If Link transfer is programmed for an Outbound Transfer and your CallPilot lines do not support this feature, the caller is disconnected. Ask your System Administrator before programming a Link transfer.

To perform a Link transfer with Outbound Transfer you must add **#** before the Outbound Transfer telephone number.

For example, the telephone number looks like:

**#** **5** **5** **5** **1** **2** **3** **4**

where:

- **#** instructs CallPilot to use the incoming line to perform the transfer
- **5 5 5 1 2 3 4** is the telephone number dialed

## Programming Outbound Transfer when CallPilot is behind a PBX

If you have CallPilot installed behind a PBX and you want to access an outside line and recognize dial tone, enter:

**9** **#** **4** **2** **5** **5** **5** **1** **2** **3** **4**

where:

- **9** accesses an outside line
- **#** specifies the next digits are special characters
- **4** recognizes dial tone
- **2** specifies that the next digits are the numbers to be dialed
- **5 5 5 1 2 3 4** is the telephone number dialed

After you enter this dialing sequence, the display shows:

9D5551234  
ADD OK



---

## Chapter 10

# Off-premise Message Notification

---

This chapter describes how to set up and change Off-premise Message Notification and explains:

- [About Off-premise Message Notification](#)
- [Setting up Off-premise Message Notification](#)
- [Changing Off-premise Message Notification](#)
- [Deleting a destination number](#)
- [Adding a destination number](#)
- [Turning Off-premise Message Notification on or off](#)

## About Off-premise Message Notification

You can program CallPilot to call you at a phone number, an extension, or a pager when you have a message. Your System Administrator enables Off-premise Message Notification.

If you program CallPilot to call you at a phone, you are prompted to enter your password before you can listen to your messages.

You can receive notification of a message at a maximum of five different destination numbers. When the number of retry attempts is reached for each destination number, the next number in the series is called. For example, CallPilot can contact your car phone number first to let you know you have a message. If there is no answer, the call rings at your home number. If there is still no answer, the call rings at your pager number, and so on. The number of retry attempts is assigned by your System Administrator.

If the destination type is as telephone or extension, you must assign start and stop times. The start and stop times apply to all five notification numbers. You do not assign start and stop times if the destination is a pager.

Off-premise Message Notification begins at the start time. Set the start time for the time you are at the destination phone number, so you are there to receive your calls.

A person who receives a Off-premise Message Notification call can cancel Off-premise Message Notification to their destination number. This is useful if a destination is incorrectly programmed and the wrong person receives the calls.

The recipient of an Off-premise Message Notification call hears the following voice prompt: *“Message for (name of mailbox owner). To log on press [1]. If you have received this call by mistake, please press [2].”*

## Off-premise Message Notification parameters

You can set up the parameters for Off-premise Message Notification from any tone dial phone.

The parameters are:

- destination type (phone, extension or pager)
- destination number (phone, extension or pager)
- time range for receiving calls at phone numbers or extensions. Pagers are notified any time there is a qualifying message.
- types of message you want to receive (all new messages or just urgent messages)



**Note:** The restrictions that apply to your phone line also apply to Off-premise Message Notification numbers. For example, if you cannot dial long distance phone numbers from your phone, you cannot have a long distance Off-premise Message Notification destination number.

---

## Setting up Off-premise Message Notification

Follow these instructions if you are setting up Off-premise Message Notification for the first time. If you have already set up Off-premise Message Notification, refer to the section “[Changing Off-premise Message Notification](#)” on page 85.

To set up Off-premise Message Notification to	refer to
a phone number	<a href="#">page 75</a>
an extension	<a href="#">page 78</a>
a pager	<a href="#">page 80</a>

### To set up Off-premise Message Notification to a phone number

- Press **☰** **9** **8** **1**.  
Follow the voice prompts or the display button options to open your mailbox.
- If you use the CallPilot interface:
  - Press **8** **5** to open the Mailbox Tools
  - Press **NOTIF** or **2** to open the Off-premise Message Notification menu
  - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **8**
- Press **6** to open the Off-premise Message Notification menu
- Go to step 3

Msg notify  
ADMIN SELECT

- Press **ADMIN** or **1** to set up Off-premise Message Notification.

Destination:  
PHONE EXT PAGER

- Press **PHONE** or **1** to choose a phone number destination.

Ph:  
RETRY OK

- Enter the destination phone number and press **OK** or **#**. The destination phone number is a maximum of 30 digits.

<x>  
ADD OK

- 6** Press OK or # to accept the destination phone number represented by <x>  
or  
press ADD or 2 to add special characters and use your dialpad or follow the voice prompts to add characters.  
See [“Adding special characters to a destination number” on page 68.](#)  
After you add special characters, press OK or # to accept the destination number.

Start hhmm:  
RETRY OK

- 7** Enter the start time for Off-premise Message Notification. This is a four-digit field. You must precede a single-digit hour and minute with a zero.

<start time>  
RETRY AM PM

- 8** Press AM or 1  
or  
PM or 2.

<start time>  
RETRY OK

- 9** Press OK or # to accept the start time.

Stop hhmm:  
RETRY OK

- 10** Enter the time when Off-premise Message Notification is to stop. This is a four digit field. You must precede a single-digit hour and minute with a zero.

<stop time>  
RETRY AM PM

- 11** Press AM or 1  
or  
PM or 2.

<stop time>  
RETRY OK

- 12** Press OK or # to accept the stop time.

More dest?  
YES NO

- 13** Press YES or 1 if you want to set up another destination number  
or  
press NO or # if you do not want to set up another destination number.

Start:<start time>  
CHNG NEXT

- 14** Press NEXT or # to accept the start time that you entered  
or  
press CHNG or 1 to change the start time.


Stop:<stop time>  
CHNG NEXT

- 15** Press NEXT or # to accept the stop time that you entered  
or  
press CHNG or 1 to change the stop time.

Msg type: new  
CHNG OK

- 16** Press **OK** or **#** if you want to be notified when you receive a new message  
or  
press **CHNG** or **1** if you want to be notified only when you receive an urgent message.

Msg notify  
ADMIN SELECT

- 17** Press **** to end the session.

## To set up Off-premise Message Notification to an extension

1 Press **[\*] 9 8 1**.  
Follow the voice prompts or the display button options to open your mailbox.

2 If you use the CallPilot interface:

- Press **[8] [5]** to open the Mailbox Tools
- Press **NOTIF** or **[2]** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[6]** to open the Off-premise Message Notification menu
- Go to step 3

```
Ms9 notify
ADMIN      SELECT
```

3 Press **ADMIN** or **[1]** to set up Off-premise Message Notification.

```
Destination:
PHONE EXT  PAGER
```

4 Press **EXT** or **[2]** to choose an extension as the destination.

```
Ext:
RETRY      OK
```

5 Enter the destination number and press **OK** or **[#]**.

```
Accept:<x>
RETRY      OK
```

6 Press **OK** or **[#]** to accept the destination extension.  
The <x> represents the extension.

```
Start hhmm:
RETRY      OK
```

7 Enter the start time for Off-premise Message Notification. This is a four-digit field. Any single-digit hour and minute must be preceded by zero.

```
<start time>
RETRY  AM  PM
```


8 Press **AM** or **[1]**  
or  
**PM** or **[2]**.

```
<start time>
RETRY      OK
```

9 Press **OK** or **[#]** to accept the start time.

```
Stop hhmm:
RETRY      OK
```

10 Enter the time when Off-premise Message Notification is to stop. This is a four digit field. You must precede a single-digit hour and minute with a zero.

- 11** Press AM or **1**  
or  
PM or **2**.
- 12** Press OK or **#** to accept the stop time.
- 13** Press YES or **1** if you want to set up another destination number  
or  
press NO or **#** if you do not want to set up another destination  
number.
- 14** Press NEXT or **#** to accept the start time that you entered  
or  
press CHNG or **1** to change the start time.
- 15** Press NEXT or **#** to accept the stop time that you entered  
or  
press CHNG or **1** to change the stop time.
- 16** Press OK or **#** if you want to be notified when you receive a new  
message  
or  
press CHNG or **1** if you want to be notified only when you receive  
an urgent message.
- 17** Press  to end the session.

## Setting up Off-premise Message Notification to a pager number

### Example of a destination pager number

If you are assigning a pager destination number from behind a PBX, remember to insert a **9** (depending on your system) before the **#** to access an outside line.

There is a combined limit of 30 characters for the pager phone number and the pager message.

For example, to reach your pager, enter:

**# 4 2 5 5 5 1 2 3 4 # 3**

where:

- **#** specifies the next digits are special characters
- **4** recognizes dial tone
- **2** specifies that the next digits are the numbers to be dialed
- **5 5 5 1 2 3 4** is the pager phone number dialed
- **3** inserts a timed pause

Depending on the company supplying your paging service, the programming sequence can vary. For more information about setting the destination phone number parameters for your pager, contact your pager company.

### To set up Off-premise Message Notification to a pager

- 1 Press **☛ 9 8 1**.

Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **8 5** to open the Mailbox Tools
- Press **NOTIF** or **2** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **8**
- Press **6** to open the Off-premise Message Notification menu
- Go to step 3

Msg notify  
ADMIN SELECT

- 3 Press **ADMIN** or **1** to set up Off-premise Message Notification.



- 4** Press **PAGER** or **3** to select a pager number destination.
- 5** Enter the destination pager number and press **OK** or **#**.
- 6** Press **OK** or **#** to accept the destination pager number represented by <x> or press **ADD** or **2** to add special characters and use your dialpad or follow the voice prompts to add characters. See [“Adding special characters to a destination number” on page 68](#). After you add special characters, press **OK** or **#**.
- 7** Press **NEXT** or **#** to accept the default pager message represented by <xxxx>. The default pager message that CallPilot sends is the CallPilot extension. This is the sequence of digits that is sent after the pager service is dialed, to notify you of who is paging you or press **CHNG** or **1** to change the pager message. The combined limit is 30 characters for the pager phone number and the pager message.
- 8** Press **YES** or **1** if you want to set up another destination number or press **NO** or **#** if you do not want to set up another destination number.
- 9** Press **OK** or **#** to be notified when you receive a new message or press **CHNG** or **1** to change the message type to be notified only when you receive an urgent message.
- 10** Press **END** to end the session.

Destination:  
PHONE EXT **PAGER**

Pager:  
RETRY **OK**

<x>  
ADD **OK**

Show:<xxxx>  
CHNG **NEXT**

More dest?  
YES NO

Msg type: new  
CHNG **OK**

Msg notify  
ADMIN **SELECT**

## To set up Off-premise Message Notification to more than one destination

You can receive notification of a message at a maximum of five different destination numbers. The following steps show you how to enter a phone number destination and then add a pager destination for the first time.

- 1 Press **[\*] 9 8 1**.  
Follow the voice prompts or the display button options to open your mailbox.
- 2 If you use the CallPilot interface:
  - Press **[8] [5]** to open the Mailbox Tools
  - Press **NOTIF** or **[2]** to open the Off-premise Message Notification menu
  - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[6]** to open the Off-premise Message Notification menu
- Go to step 3

```
Ms9 notify
ADMIN SELECT
```

- 3 Press **ADMIN** or **[1]** to set up Off-premise Message Notification.

```
Destination:
PHONE EXT PAGER
```

- 4 Press **PHONE** or **[1]** to choose a destination phone number.

```
Ph:
RETRY OK
```

- 5 Enter the destination phone number and press **OK** or **[#]**. The destination phone number cannot be longer than 30 digits.

```
<x>
ADD OK
```

- 6 Press **OK** or **[#]** to accept the destination phone number, represented by <x>  
or  
press **ADD** or **[2]** to add special characters and use your dialpad or follow the voice prompts to add characters. See [“Adding special characters to a destination number”](#) on page 68.

```
Start: hhmm:
RETRY OK
```

- 7 Enter the start time for Off-premise Message Notification. This is a four-digit field. You must precede a single-digit hour and minute with a zero.

```
<start time>
RETRY AM PM
```

- 8 Press **AM** or **[1]**  
or  
**PM** or **[2]**.

- |   |  |
|---|--|
| <pre>&lt;start time&gt; RETRY      OK</pre>     | <p><b>9</b> Press <u>OK</u> or <u>#</u> to accept the start time.</p>  |
| <pre>Stop hhmm: RETRY      OK</pre>             | <p><b>10</b> Enter the time when Off-premise Message Notification is to stop. This is a four digit field. You must precede a single-digit hour and minute with a zero.</p>   |
| <pre>&lt;stop time&gt; RETRY  AM  PM</pre>      | <p><b>11</b> Press <u>AM</u> or <u>1</u><br/>or<br/><u>PM</u> or <u>2</u>.</p>   |
| <pre>&lt;stop time&gt; RETRY      OK</pre>      | <p><b>12</b> Press <u>OK</u> or <u>#</u> to accept the stop time.</p>  |
| <pre>More dest? YES  NO</pre>                   | <p><b>13</b> Press <u>YES</u> or <u>1</u> to set up another destination number.</p>  |
| <pre>Notify2: none SETUP      NEXT</pre>        | <p><b>14</b> Press <u>SETUP</u> to set up another destination number.</p>  |
| <pre>Destination: PHONE EXT  <u>PAGER</u></pre> | <p><b>15</b> Press <u>PAGER</u> or <u>3</u> to select a pager number destination.</p>  |
| <pre>Pager: RETRY      OK</pre>                 | <p><b>16</b> Enter the destination pager number and press <u>OK</u> or <u>#</u>.</p>   |
| <pre>&lt;xxx&gt; ADD      OK</pre>              | <p><b>17</b> Press <u>OK</u> or <u>#</u> to accept the destination pager number represented by &lt;x&gt;<br/>or<br/>press <u>ADD</u> or <u>2</u> to add special characters and use your dialpad or follow the voice prompts to add characters. See <a href="#">“Adding special characters to a destination number” on page 68.</a><br/>After you add special characters, press <u>OK</u> or <u>#</u>.</p>  |
| <pre>Show&lt;xxxx&gt; CHNG      NEXT</pre>      | <p><b>18</b> Press <u>NEXT</u> or <u>#</u> to accept the default pager message represented by &lt;xxxx&gt;. The default pager message that CallPilot sends is the CallPilot extension. This is the sequence of digits that is sent after the pager service is dialed, to notify you of who is paging you<br/>or<br/>press <u>CHNG</u> or <u>1</u> to change the pager message.<br/>The combined limit is 30 characters for the pager phone number and the pager message.</p> |
| <pre>Notify2: pager CHNG  OTHR  NEXT</pre>      | <p><b>19</b> The display shows that the second destination is a pager. Press <u>NEXT</u> or <u>#</u> to continue.</p>  |
| <pre>Notify 3: none SETUP      NEXT</pre>       | <p><b>20</b> Press <u>NEXT</u> or <u>#</u> to continue.</p>  |

Start:<start time>  
CHNG NEXT

**21** Press NEXT or  to accept the start time that you entered or press CHNG or  to change the start time.

Stop:<stop time>  
CHNG NEXT

**22** Press NEXT or  to accept the stop time that you entered or press CHNG or  to change the stop time.

Msg type: new  
CHNG OK

**23** Press OK or  to be notified when you receive a new message or press CHNG or  to be notified only when you receive an urgent message.

Msg notify  
ADMIN SELECT

**24** Press  to end the session.

## Changing Off-premise Message Notification

You can change the parameters and destinations for Off-Premise Message Notification. Refer to “[Off-premise Message Notification parameters](#)” on page 74 for more information about parameters.

If you want to change the time or message type parameters, use the procedure “[To change the time range or type of message parameters](#)” on page 85

If you want to change the destination type refer to the procedure for the destination type.

To change the destination type	refer to
from a phone to an extension, pager or another phone number	<a href="#">page 87</a>
from a pager to an extension or phone	<a href="#">page 89</a>
from a phone or extension to a pager	<a href="#">page 91</a>

### To change the time range or type of message parameters

- Press **[\*] 9 8 1**.  
Follow the voice prompts or the display button options on your telephone to open your mailbox.
- If you use the CallPilot interface:
  - Press **[8] [5]** to open the Mailbox Tools
  - Press **NOTIF** or **[2]** to open the Off-premise Message Notification menu
  - Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[6]** to open the Off-premise Message Notification menu
- Go to step 3

```
Ms9 notify
ADMIN SELECT
```

- Press **ADMIN** or **[1]** to set up Off-premise Message Notification.

```
Notify:<<x>
CHNG NEXT
```

- Press **NEXT**.  
If you want to change the destination type refer to “[To change the destination type](#)” on page 85 for the appropriate procedure.

```
More dest?
YES NO
```

- Press **NQ** or **[#]** to continue.

Start:<start time>  
CHNG NEXT

- 6** Press CHNG or **1** to change the start time or press NEXT or **#** to accept the start time.


Stop:<stop time>  
CHNG NEXT

- 7** Press CHNG or **1** to change the stop time or press NEXT or **#** to accept the stop time.

Msg type: new  
CHNG OK

- 8** Press CHNG or **1** to change the message type to urgent. Press OK or **#** to accept the new default message. You can choose to be notified of all new messages or urgent messages only. Change the message type to urgent to be notified only when you receive an urgent message.

Msg notify  
ADMIN SELECT

- 9** Press  to end the session.

## To change the destination from phone to another destination

- 1 Press **[\*] 9 8 1**.  
Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **[8] [5]** to open the Mailbox Tools
- Press **NOTIF** or **[2]** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[6]** to open the Off-premise Message Notification menu
- Go to step 3

```
Msg notify
ADMIN  SELECT
```

- 3 Press **ADMIN** or **[1]** to set up Off-premise Message Notification.

```
Notify: phone
CHNG  NEXT
```

- 4 Press **CHNG** or **[1]** to change the destination.

```
Destination:
PHONE  EXT  PAGER
```

- 5 Press **PHONE** or **[1]** to choose another phone number destination  
or  
press **EXT** or **[2]** to choose an extension destination  
or  
press **PAGER** or **[3]** to choose a pager number destination.

```
<>
RETRY  OK
```

- 6 Enter the destination number and press **OK** or **[#]**.  
The destination phone number cannot be longer than 30 digits.

```
Accept:<xxxx>
RETRY  OK
```

- 7 Press **OK** or **[#]** to accept the destination number  
or  
press **RETRY** or **[\*]** to re-enter the destination number.

```
Notify:<>
CHNG  NEXT
```

- 8 Press **NEXT** or **[#]** to continue  
or  
press **CHNG** or **[1]** to change the destination, and repeat steps 6 through 8.

NOTE: If you changed the destination to pager, go to step 13.

More dest?  
YES NO

**9** Press YES or **1** if you want to set up another destination number or press NO or **#** if you do not want to set up another destination number.

Start:<start time>  
CHNG NEXT

**10** Press CHNG or **1** to change the start time or press NEXT or **#** to accept the start time.

Stop:<stop time>  
CHNG NEXT

**11** Press CHNG or **1** to change the stop time or press NEXT or **#** to accept the stop time.

Msg type:new  
CHNG OK

**12** If you want to change message notification, press CHNG or **1** if you want to be notified only when you receive an urgent message. Press OK or **#**.

Msg notify  
ADMIN SELECT

**13** Press **[END]** to end the session.



## To change the destination from pager to phone or extension

- 1 Press **[\*] 9 8 1**.  
Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **[8] [5]** to open the Mailbox Tools
- Press **NOTIF** or **[2]** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[6]** to open the Off-premise Message Notification menu
- Go to step 3

```
Msg notify
ADMIN SELECT
```

- 3 Press **ADMIN** or **[1]** to change Off-premise Message Notification. The display is a review of the first destination type and destination number.

```
Modify:Pager
CHNG NEXT
```

- 4 Press **CHNG** or **[1]** to change the destination type and the destination number.

```
Destination:
PHONE EXT PAGER
```

- 5 Choose the type of destination number:  
press **PHONE** or **[1]** to choose a phone number destination  
or  
press **EXT** or **[2]** to choose an extension destination.

```
<xxx>:
RETRY OK
```

- 6 Enter the destination number you want to set up Off-Premise Message Notification for.  
<x> represents the destination number.  
Press **OK** or **[#]** to accept the destination number  
or  
press **RETRY** or **[\*]** to re-enter the number.

```
Notify:<x>
CHNG NEXT
```

- 7 Press **NEXT** or **[#]** to continue.

```
More dest?
YES NO
```

- 8 Press **YES** or **[1]** if you want to set up another destination, and repeat steps 6 through 8  
or  
press **NO** or **[#]** if you do not want to set up another destination.

Start:<start time>  
CHNG NEXT

**9** Press CHNG or **1** to change the start time or press NEXT or **#** to accept the start time.


Stop:<stop time>  
CHNG NEXT

**10** Press CHNG or **1** to change the stop time or press NEXT or **#** to accept the stop time.

Msg type:new  
CHNG OK

**11** If you want to change message notification, press CHNG or **1** if you want to be notified only when you receive an urgent message. Press OK or **#**.

Msg notify  
ADMIN SELECT

**12** Press  to end the session.

## To change the destination from phone or extension to pager

- 1 Press **[☰] 9 8 1**.  
Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **[8] [5]** to open the Mailbox Tools
- Press **NOTIF** or **[2]** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[6]** to open the Off-premise Message Notification menu
- Go to step 3

```
Msg notify
ADMIN SELECT
```

- 3 Press **ADMIN** or **[1]** to change Off-premise Message Notification. The displays show a review of the first destination type and destination number.

```
Notify:<x>
CHNG NEXT
```

- 4 Press **CHNG** or **[1]** to change the destination type and the destination number.  
<x> represents the type of destination (phone or extension).

```
Destination
PHONE EXT PAGER
```

- 5 Press **PAGER** or **[3]** to choose a pager number destination.

```
Pager:
RETRY OK
```

- 6 Enter the pager number and press **OK** or **[#]** to continue.

```
<x>
ADD OK
```

- 7 Press **OK** or **[#]** to accept the destination pager number represented by <x>  
or  
press **ADD** or **[2]** to add special characters and use your dialpad or follow the voice prompts to add characters.  
See [“Adding special characters to a destination number” on page 68](#).  
After you add special characters, press **OK** or **[#]**.

Show:<xxxx>  
CHNG NEXT

- 8** Press NEXT or **#** to accept the default pager message represented by <xxxx>. The default pager message that CallPilot sends is the CallPilot extension. This is the sequence of digits that is sent after the pager service is dialed, to notify you of who is paging you or press CHNG or **1** to change the pager message. The combined limit is 30 characters for the pager phone number and the pager message.

Notify: pager  
CHNG NEXT

- 9** The display shows notification is set up to a pager. Press NEXT or **#** to continue.

More dest?  
YES NO

- 10** Press YES if you want to set up another destination number or press NO if you do not want to set up another destination number.

Msg type: new  
CHNG OK

- 11** Press OK or **#** if you want to be notified when you receive a new message or press CHNG or **1** if you want to be notified only when you receive an urgent message.

Msg notify  
ADMIN SELECT

- 12** Press **[End Call]** to end the session.

## Deleting a destination number

If you have more than one destination number for Off-premise Message Notification, you can delete a destination.

### To delete a destination number

- 1 Press **[Home]** **[9]** **[8]** **[1]**.  
Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **[8]** **[5]** to open the Mailbox Tools
- Press **NOTIF** or **[2]** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[6]** to open the Off-premise Message Notification menu
- Go to step 3

```
Ms9 notify
ADMIN SELECT
```

- 3 Press **ADMIN** or **[1]** to set up Off-premise Message Notification.

```
Notify1:<>
CHNG OTHR NEXT
```

- 4 Press **OTHR** if you want to delete the first destination or press **NEXT** or **[#]** to view the other destinations until you find the destination that you want to delete. When you find the destination that you want to delete, press **OTHR**.

```
Notify 1:<>
DEL INS QUIT
```

- 5 Press **DEL** to delete the first destination number.

```
Notify1:<>
CHNG OTHR NEXT
```

- 6 The first destination number is deleted. The Notify 2 destination changes to become the Notify 1 destination number. To delete more destination numbers, press **OTHR** and repeat steps 4 and 5.

```
Ms9 notify
ADMIN SELECT
```

- 7 Press **[End]** to end the session.

## Adding a destination number

Use this procedure if you have set up Off-premise Message Notification and you want to add another destination number. You can have up to five destination numbers.

### To add a destination number

- 1 Press **[\*] 9 [8] 1**.  
Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **[8] [5]** to open the Mailbox Tools
- Press **NOTIF** or **[2]** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[6]** to open the Off-premise Message Notification menu
- Go to step 3

```
Ms9 notify
ADMIN SELECT
```

- 3 Press **ADMIN** or **[1]** to set up Off-premise Message Notification.

```
Notify:<>
CHNG      NEXT
```

- 4 Press **NEXT** or **[#]** to continue.

```
More dest?
YES      NO
```

- 5 Press **YES** or **[1]** to set up another destination number.

```
Notify2: none
SETUP    NEXT
```

- 6 Press **SETUP** or **[1]** to set up another destination number and follow the steps in [“To set up Off-premise Message Notification to a phone number”](#) on page 75  
or  
[“To set up Off-premise Message Notification to an extension”](#) on page 78  
or  
[“To set up Off-premise Message Notification to a pager”](#) on page 80.

## Turning Off-premise Message Notification on or off

You can turn Off-premise Message Notification on or off at any time. If you turn Off-premise Message Notification off, you do not affect any of the assigned parameters.

### To turn Off-premise Message Notification on or off

- 1 Press **[\*] 9 8 1**.  
Follow the voice prompts or the display button options to open your mailbox.

- 2 If you use the CallPilot interface:

- Press **[8] [5]** to open the Mailbox Tools
- Press **NOTIF** or **[2]** to open the Off-premise Message Notification menu
- Go to step 3

If you use the Norstar Voice Mail interface:

- Press **ADMIN** or **[8]**
- Press **[6]** to open the Off-premise Message Notification menu
- Go to step 3

```
Msg notify
ADMIN SELECT
```

- 3 Press **SELECT** or **[2]** to set up Off-premise Message Notification.

```
Notify on
CHNG TIME OK
```

- 4 Press **CHNG** or **[1]** to turn Off-premise Message Notification off if it is on (as shown).

```
Notify off
CHNG TIME OK
```

- 5 Press **OK** or **[\*]**  
or  
press **TIME** to review the start and stop time parameters.

```
Mailbox admin
GREET PSWD QUIT
```

- 6 Press **[\*]** to end the session.





---

## Chapter 11

### Recording a call

---

#### About Call Record

With Call Record you can record an active telephone call and put the resulting message in your mailbox. Before you activate Call Record, ask the parties on the call for permission to record the call.

The maximum length of the Call Record message is determined by the Class of Service setting for your incoming message length. If the mailbox message length is reached, you hear the voice prompt “*Recording stopped. The recording limit has been reached*” and the recording ends. After Call Record stops, you can re-activate to start another record call session. The call is recorded in two separate messages if you do this. Ask your System Administrator for the message length that is assigned to your mailbox.



**Note:** Call Record is not enabled by default. The System Administrator must enable this feature by assigning you a Class of Service that includes Call Record. In some areas Call Record is not available as it contravenes local laws. Ask your System Administrator about the availability of Call Record in your area.

 
---

#### Using Call Record

If you use record a call, CallPilot puts the recorded call in your mailbox. You can forward the recorded call to other mailboxes.

#### To record a call

- 1 While you are on an active call, press .  
Before recording begins, all parties on the call hear the prompt “*This call is being recorded*” and a recording tone.
- 2 Press **QUIT** to end recording  
or  
press **PAUSE** to suspend recording.  
Press **RESUME** to continue recording or press **QUIT** to end recording.
- 3 When you stop recording, all the parties on the call hear the prompt “*Recording stopped.*”
- 4 Press to end the call.





---

## Chapter 12

# Broadcast and Information messages

---

### About Broadcast messages

You can ask the System Administrator to send a Broadcast message if you need to send a message to every initialized mailbox on your phone system. You can ask the System Administrator to send a Broadcast message to announce meetings, special company events, and reminders. Sending a Broadcast message eliminates recording and sending the same message several times.

Broadcast messages play on all mailboxes initialized with CallPilot.



**Note:** Broadcast messages are not sent to Information or General Delivery mailboxes.

---

### Information mailbox greetings

Your business or department can use Information mailboxes to provide callers with messages and announcements. You can record and update greetings for an Information mailbox.

You can use Information mailbox greetings to:

- announce sales
- provide product lists
- announce special events

Make it easy for callers to access Information mailbox greetings by mentioning the Information mailbox in the Automated Attendant, or by asking the operator to route enquiries to the Information mailbox. Ask your System Administrator for details.

Callers cannot leave messages in an Information mailbox.

## Recording an Information mailbox greeting

Before you record an Information mailbox greeting, you must determine what the greeting includes. Be sure to include important times and dates.

For example: *“Paddy’s Dance Studio proudly presents an extravaganza of dance. The entertainment begins at 8:00 pm on the fourth of July. Toddlers tap is in the White Room. Folk dance is in the Green Room. Classical ballet is in the Pink Room. Contemporary jazz is in the Blue Room. The studio and recital rooms are located at 222 Main Street.”*

Write the greeting down and practice reading it aloud. When you are confident the greeting includes everything you want it to, record the greeting. If you are using a phone system with bilingual capability, you must record the Information mailbox greeting in both languages.

An Information mailbox greeting can be either a Primary or an Alternate mailbox greeting.

## To record an Information mailbox greeting

Log:  
QUIT    RETRY    OK

- 1 Press 9 8 1.  
Enter the mailbox number and password, then press OK or #.

The System Administrator creates the password when they initialize the mailbox. Ask the System Administrator for the Information mailbox password.

Primary greeting  
REC    PLAY    QUIT

- 2 Press REC or 1.

Record greeting?  
RETRY    PAUSE    OK

- 3 At the sound of the tone, record the Information mailbox greeting. Press OK or # when you are done.

Accept greeting?  
RETRY    PLAY    OK

- 4 Press OK or # to accept the recording  
or  
press PLAY or 1 to listen to the greeting  
or  
press RETRY or 2 to rerecord the greeting.

Primary greeting  
REC    PLAY    QUIT

- 5 Press QUIT or # to end the session.

---

## Chapter 13

### CallPilot tips

---

This chapter contains tips on how to optimize your use of CallPilot.

**Listen to your messages frequently.** Answer your messages promptly to encourage callers to use CallPilot and reassure them that it is as reliable as speaking with you personally.

You do not have to be at your desk to play your messages. When you are away from your desk, you can play your messages from any tone dial phone.

**Clean up your mailbox.** There is limited storage in your mailbox and within CallPilot. Do not save messages unless you need to listen to them again. When you are finished with a message, erase it to create storage space.

**Keep a record of your password in a secure place.** Treat your CallPilot password as a secret code. Write down your password and keep it in a safe place. Do not keep your password near your phone. If you let someone else have temporary access to your mailbox, change your password afterwards. If you forget your password, the System Administrator can reset it to the default password 0000. You can then enter a new password.

**When sending messages, make them brief and to the point.** More than 75% of the time spent on a normal business phone call consists of making small talk, pleasantries and other socializing. Sending a message rather than making a call can save you time. Try to avoid sounding hurried or rude while restricting your messages to the essentials.

**Change your Primary greeting frequently.** It is a good idea to change your Primary greeting on a regular basis. Change your greeting to indicate that you listen to your messages and maintain your mailbox on a regular basis. Change your Primary greeting to provide a personal touch that frequent callers appreciate.

**Make your Alternate greeting specific.** Choosing an Alternate greeting usually means you are away from the office. If you are out of the office, indicate in your Alternate greeting when you expect to return. If you will be checking your mailbox while you are out of the office, include that in your message. If callers can reach you at another phone number, ensure that your message includes the phone number and the time period of the temporary arrangement. If you are going to be out of the office, remember to press Call Forward     to forward incoming calls to your mailbox.

**Use an Extended Absence Greeting.** Begin this greeting by announcing your vacation or travel plans. This gets the attention of the caller. For example, *“Vacation alert! Hi, this is Marshall. I will be on vacation starting on the 5th, and I will be returning to work on the 12th. If you care to do so, please leave a message and I will return your call when I return from vacation. For immediate assistance, please press zero.”*

**Record your greetings and messages clearly.** For a better quality recording, speak directly into the handset. Do not use the Handsfree feature. Remember to speak clearly in a pleasant voice at a pace that is easy to understand. Do not speak too softly or loudly or make the greeting or message too lengthy. After you record a greeting or message play it back. Make sure that your greeting or message sounds the way you want it to before you accept it.

**Do not forget to use the Copy and Reply features.** You can use CallPilot to send copies of messages to other mailboxes and reply to messages with a message of your own. When you send copies of messages to other people, ensure that your introduction explains:

- why you are forwarding a copy of the message
- whether the copy is for information only
- whether the message is meant for the person you are forwarding it to
- who is responsible for the action on the message

**Use Group Lists for multiple copies of messages.** If you find that you regularly send the same message to several people, ask the System Administrator to create a Group List for you. With a Group List, you can send the same message to all the mailboxes in the Group List.

**Encourage CallPilot use.** Old habits are sometimes hard to break, and some people have difficulty accepting or trying new technologies. Use your Personal mailbox and other CallPilot features, and encourage your co-workers and frequent callers to use them too.

**Report problems promptly.** If you encounter problems using CallPilot, report the trouble to the System Administrator as soon as possible.

---

## Chapter 14

# Troubleshooting

---

This chapter describes some problems that can occur when you use CallPilot. Some typical problems are listed and what to do if they occur.

### **The Auto Attendant transfers some callers to the General Delivery Mailbox**

CallPilot requires a tone signal and a minimum voice level. If CallPilot does not receive a response, the caller is automatically transferred by the Auto Attendant to the CallPilot operator. If the operator is not available, the call transfers to the General Delivery Mailbox.

Possibly the extension called does not have a mailbox assigned to it. Ask your System Administrator to verify that the mailbox is assigned to the extension.

### **Feature 981 produces a LOG prompt on my phone display**

Possible causes of the Log prompt:

- The extension you are using does not have an operating mailbox. If the extension does not have a mailbox, CallPilot requests both a mailbox number and a password.
- The extension is a Guest mailbox, which normally does not have an assigned extension. Ask your System Administrator to verify that your extension is properly assigned to your mailbox.

### **I cannot forward my phone to CallPilot**

If you try to forward your extension to CallPilot and the display shows **Not in service** you can be forwarding to the wrong extension number. Use     to verify you are calling the correct CallPilot extension number.

### **My mailbox is not accepting messages**

Make sure your mailbox is initialized. A mailbox cannot receive messages until it is initialized by the owner. Refer to [“Initializing your mailbox” on page 17](#).

Make sure your mailbox is not full. Refer to [“My mailbox is full” on page 104](#).

If you are using an Alternate greeting, check if you have set up your mailbox to accept messages. Refer to [“Choosing a Primary or Alternate mailbox greeting” on page 32](#).

### **My name does not play in the Company Directory**

Check to ensure that your mailbox is initialized. If it is not initialized, your name does not play in the Company Directory and your mailbox cannot receive any messages. If you have recorded your Company Directory name, ask your System Administrator to ensure that the Company Directory is available.

### **I forgot my mailbox password**

A forgotten password cannot be recovered. Your old password must be reset to the default password of four zeroes (0000). After the System Administrator resets your password, you must open your mailbox and change the default password.

### **My mailbox is locked**

Your mailbox is locked if you attempt to access your mailbox and you hear the recording: *“This mailbox has been locked to prevent unauthorized access. Please contact your administrator for assistance.”*

Your mailbox is assigned a maximum number of incorrect password attempts. CallPilot records the number of incorrect attempts from the last time your mailbox was successfully accessed. If the number is exceeded you are locked out. You cannot open your mailbox until the System Administrator resets the password.

### **CallPilot Timeout**

The Timeout feature allows five seconds for you to choose an option. If CallPilot does not detect a selection, it replays the option list. If an option is still not selected, CallPilot ends the session.

CallPilot has minimum voice level detection. If CallPilot does not detect an audio signal, it requests the caller to speak louder and provides the option to re-record. If no voice level is detected after the prompt, CallPilot ends the session.

### **Messages are cut off**

If people need to leave long messages in your mailbox, you can ask the System Administrator to give you more message recording storage space.

### **My mailbox is full**

You know that your mailbox is full if you attempt to listen to your messages and you hear the message, *“Your mailbox is full. You must erase some messages before you can listen to new messages.”*

Your mailbox is equipped with the Never Full Mailbox feature, which lets external callers leave a message in your mailbox, even if the mailbox is “full”. The message is stored, but you cannot access it until you delete at least one saved message. If you find that you need more message time in your mailbox, ask your System Administrator to give you more storage space.

### **The wrong prompt language appears on the display of my phone**

If the wrong language appears on the display of your phone, notify the System Administrator.

### **Outbound Transfer does not work**

Ensure that you have recorded the correct instructions for callers in your personal greeting. In your greeting, tell callers to press  if you use the Norstar Voice Mail interface, or  if you use the CallPilot interface, to reach you. Refer to [“About Outbound Transfer” on page 68](#) for information.



Ensure that the destination number you enter is not restricted. For example, if you cannot call long distance numbers from your phone, you cannot set up Outbound Transfer to a long distance number.

Check to see if Outbound Transfer is turned on. Refer to [“Turning Outbound Transfer on or off” on page 71](#) for more information.

**Off-premise Message Notification does not work**

If Off-premise Message Notification does not work, ask the System Administrator to check the Off-premise Message Notification parameters. Also, ask the System Administrator to check whether you are allowed to have Off-premise Message Notification. Ensure that the destination phone number and time parameters are correct.

Ensure that the destination numbers that you enter are not restricted. For example, if you cannot call long distance numbers from your phone, you cannot set up Off-premise Message Notification to a long distance number.

Check to see if Off-premise Message Notification is turned on. Refer to [“Turning Off-premise Message Notification on or off” on page 95](#) for more information.

**I cannot use the Reply feature**

If you cannot use the Reply feature to reply to an external or network message, contact your System Administrator. The Reply feature is always available for internal calls.



---

# Glossary

---

**Administration**

The tasks involved in maintaining CallPilot mailboxes, greetings and set up configuration.

**Alternate greeting**

A greeting recorded for a Personal mailbox and played on occasions such as absence, illness, or vacation.

**Attendant sign On/Off**

The task performed by a company receptionist or Operator that indicates to CallPilot when an Operator is available to answer calls.

**ATA 2**

A Nortel Networks product that lets you connect an analog device, such as a single line telephone or a fax machine, to your telephone system.

**Auto Attendant**

The CallPilot answering service that answers incoming calls with a Company greeting, plays a list of CallPilot options to a caller and performs call routing functions in response to a caller's dialpad selections.

**Broadcast Message**

A message that can be sent only by the System Administrator. This type of message plays in all initialized Subscriber mailboxes.

**Business Status**

A CallPilot setting that tells CallPilot whether a company is closed or open for business.

**Class of Service**

A predetermined number designation that specifies the CallPilot options for a mailbox.

**Company Directory**

A voice list that contains the names of users with initialized mailboxes that are designated to appear in the Company Directory.

**Conventions**

The way certain information is described. For example, using underlined text to represent second-line display prompt information.

**Default**

The parameters preset in CallPilot.

**Designated Operator**

A person who is assigned to answer the CallPilot Operator Request option.

**Display**

A one line or two line screen on a display telephone that shows CallPilot commands and options.

**Display buttons**

The three buttons on a two line display telephone. Users press these buttons to select the specified CallPilot option.

**Display options**

The choices available to a user that appear on a two line display telephone. Options shown on the display can be selected using the display or dialpad buttons

**DTMF**

Dual-Tone MultiFrequency. The type of audio signals that are generated when you press the buttons on a touch-tone telephone.

**Envelope information**

A date and time stamp that appears on messages left in a mailbox. If the message is left by another mailbox owner, envelope information includes the names of the sender and other recipients.

**Extension**

A two-digit to seven-digit number used to reach a designated telephone. An internal telephone is also referred to as an extension.

**Feature code**

A unique three-digit code used to access CallPilot features and options.

**General Delivery Mailbox**

One of the two Special mailboxes used to store messages for people who do not have a Subscriber mailbox.

**Greetings**

There are three types of CallPilot greetings: Company greetings, Personal mailbox greetings and Information greetings. Company greetings are played by the Auto Attendant to incoming callers. Personal mailbox greetings are played to callers who want to leave a message in a selected mailbox. Information mailbox greetings are played to describe goods or services available to callers.

**Group Lists**

A collection of mailbox numbers assigned to a special group name and number by the System Administrator. If a message is sent to a Group List, each mailbox in the list receives the same message.

**Guest mailbox**

A mailbox assigned to a user who does not have an extension.

**Information mailbox**

A mailbox that provides a caller with a message describing goods or services available from your company.

**Initializing a mailbox**

Preparing a mailbox to receive messages, which includes changing a mailbox default password and recording a Company Directory name.

**Leave Message**

The feature code used to leave messages in CallPilot mailboxes.

**Mailbox**

A storage place for voice messages on the CallPilot system.

**Mailbox number length**

The number of digits allowed in a mailbox number.

**Mailbox properties**

Mailbox properties are optional parameters in addition to the Class of Service values. The mailbox properties are: Include in Company Directory, Alternate Extensions, Express Messaging Line, Call Screening, Message Waiting Notification and Outdial route.

**Message delivery options**

Message sending options for a message. A message delivery option can be assigned to a message after it is recorded.

Message delivery options are:

- Normal
- Certified/Acknowledge
- Urgent
- Private
- Timed

**Message Waiting Notification**

A display prompt that informs a mailbox owner when a message is left in a mailbox. This feature is controlled by the Class of Service for your mailbox.

**Never Full mailboxes**

Your CallPilot mailbox is equipped with the Never Full mailbox feature, which lets an external caller leave a message in your mailbox, even if the mailbox is “full”. The message is stored, but you cannot access it until you delete at least one saved message.

**Off-premise Message Notification**

The CallPilot feature that calls destination numbers that you set up, to let you know you have a new or urgent message. This feature is controlled by the Class of Service for your mailbox.

**Operator Status**

The CallPilot indicator that determines if a company’s receptionist or Designated Operator is available.

**Option**

A CallPilot choice that is given to a user through voice or display prompts.

**Password**

A four- to eight-digit number that is entered on the dialpad. A password is used to open mailboxes or perform configuration tasks.

**Pause**

You use pauses when you set up pager notification. Each pause character that you enter makes the system wait four seconds before sending out the tones for the digits that follow. For voice pagers, enter pauses after the pager number to delay the start of the CallPilot voice prompt that activates the pager. For alphanumeric pagers, enter pauses after the pager number and before the digits that appear on the pager display.

**Personal mailboxes**

Mailboxes assigned to users as a place to store messages.

**Primary greeting**

The main greeting played in a Personal mailbox.

**Programmable memory buttons**

On display telephones, buttons that can store feature codes and numbers.

**Recognize dial tone**

After accepting an Outbound Transfer or Off-premise Message Notification destination phone number, entering **4** adds a D to the digit string. CallPilot uses this to recognize dial tone when an access code is required.

**Resetting passwords**

A System Administrator task that changes a mailbox password from its current setting back to the CallPilot default setting 0000 (four zeros).

**Special mailboxes**

The two mailboxes used by the System Administrator and designated CallPilot Operator. The two Special mailboxes are the System Administrator Mailbox and the General Delivery Mailbox.

**System Administrator**

The person who configures, updates and maintains the CallPilot system.

**System Administrator Mailbox**

One of the two Special mailboxes. This mailbox is used by the System Administrator for sending Broadcast Messages. This is also the System Administrator's Personal mailbox.

**Touch tone phone**

A push-button telephone that emits DTMF tones.

**Voice prompts**

The prerecorded voice instructions that play when you access CallPilot features and options.

---

# Index

---

**A**

Alert tone 63  
 Alternate greeting 30, 101  
 Alternate Language 13  
 Analog station module (ASM) 11  
 Analog terminal adapter (ATA) 11  
 Attendant, Target 22  
 Auto Attendant 43, 103  
 Auto-Login 19

**B**

Broadcast message  
   about 99  
   recording 99

**C**

Call Forward  
   canceling 61  
   remote, setting up 62  
   setting up 61  
   with CLID, setting up 63  
 Call Forward on Busy, overrides Caller ID 63  
 Call Record 44  
 Call Screening 43  
 Caller ID 30, 34, 40, 43, 63  
   interaction with Call Forward on Busy 63  
 CallPilot  
   default password 17  
   how callers reach 37  
   Mailbox commands 27  
   Mailbox options 27  
   Other mail options 28  
   Playing messages 27  
   Sending messages 28  
   using with rotary dial telephone 37  
   using with touch tone telephone 37  
 Calls  
   interrupting 63  
   transferring  
     to General Delivery mailbox 37  
     to Operator 37  
     to receptionist 37  
 CCR Information message 67  
 Certified Acknowledge Message Delivery option 51  
 Character limit

  for Off-premise Message Notification  
     destination pager number and message 80  
   for Off-premise Message Notification destination  
     number 81, 83, 92  
   for Outbound Transfer  
     destination telephone number 68

Company Directory 13, 103  
   recording name in 17  
   removing name from 21  
 Company Directory name 29, 31  
 Copying a message 38

**D**

Default password 17  
 Deleted messages, retrieving 40, 42  
 Deleting messages 38, 41  
 Destination number  
   character limit 81, 83, 92  
   for pagers 80  
   when CallPilot is behind PBX or Centrex 80  
 Destination pager number, character limit 80  
 Destination telephone number, character limit 68  
 Display telephone  
   entering characters 11  
   using 9

**E**

Erased messages, retrieving 42  
 Erasing messages 38, 41

**F**

Feature 986 66  
 Feature 987 63  
 Feature codes 23  
 Forwarded messages, recording an introduction for 55  
 Forwarding a message 41  
 Full mailbox 37

**G**

General Delivery mailbox 37  
   purpose 15  
 Greetings 18  
   Alternate 30, 101  
   example 30  
   purpose 30

- personal 18
- Personalized 30
  - assigning 34
  - available with Caller ID 30
  - deleting 35
  - recording 34
- Primary 29, 101
  - example 29
  - purpose 29
- recording
  - Alternate 31
  - Primary 31
- recording technique 30
- Group List name 55
- Guest mailboxes 14
  - no operating extension for 14

## H

- Hold tone 43
- Home menu 67

## I

- Information mailbox greeting, recording 99
- Information message, CCR 67
- Initializing your mailbox 17
- Internal messages, replying to 56
- Interrupting a caller 44
- Interrupting calls 63
- Interrupting voice prompts 9, 12

## L

- Language, Alternate 13
- Leave Message feature 11
- Listening to your messages. see Playing your mailbox messages

## M

- Mail options
  - CallPilot 28
  - Norstar Voice Mail 26
- Mailbox
  - full 37
  - initializing 17
  - setting up 29
- Mailbox greetings, see Greetings
- Mailbox options
  - CallPilot 27
  - Norstar Voice Mail 25
- Mailbox password, changing 20

- Mailboxes
  - General Delivery
    - purpose 15
  - Guest 14
  - Information 14
  - Special 15
  - Subscriber 14
- Making selections using the dialpad, with a one line display telephone 9
- Menu, Home (CCR) 67
- Message Delivery options
  - Certified Acknowledge 51
  - Normal 51
  - Private 51
  - Timed 51
  - Urgent 51

## Messages

- copying 38
- cut off 104
- deleted, retrieving 40
- deleting 38, 41
- erasing 38, 41
- forwarding 41
- listening to, see Messages, playing
- minimum recording length 45
- playing 38
  - pausing 39
  - rewinding 38, 40
  - skipping forward 39, 40
  - skipping to end 38
  - the envelope 38, 41
  - playing the next 39, 40
  - playing the previous 39, 40
- Private, cannot copy 55
- quitting 39
- replaying 39
- replying to 39, 41
- saving 39
- silence timeout 45

## N

- Name
  - recording in Company Directory 17
  - removing from Company Directory 21
- Never Full mailbox feature 37
- Normal Message Delivery option 51
- Norstar Voice Mail
  - Mailbox commands 25
  - Mailbox options 25
  - Other mail options 26
  - Playing messages 25
  - Sending messages 26



**O**

Off-premise Message Notification 73  
 changing parameters 85  
 destination number  
   character limit 81, 83, 92  
 destination pager number and message  
   character limit 80  
 feature restrictions 74  
 not working 105  
 setting up  
   to a pager number 80  
   to a telephone number 75  
   to an extension number 78  
   to wrong destination 73

Off-premise Message Notification parameters  
 destination telephone number 74  
 destination type 74  
 time range 74  
 types of message 74

Open Mailbox feature 11

Opening your mailbox  
 Auto-Login 19  
 from your extension 19  
 remotely 19

Operator 13

Optimizing Outbound Transfer 69

Outbound Transfer  
 activating 71  
 canceling 71  
 destination telephone number  
   character limit 68  
 setting up  
   to a phone number 69  
   to an extension 70

**P**

Park and Page 13, 29

Password 104  
 “locked-out” 104  
 changing 20  
 default 17

Pausing a message 39

Personal greetings, example 22

Personalized greeting 30  
 assigning 34  
 deleting 35  
 recording 34

Playing the message envelope 38, 41

Playing your mailbox messages 38

Primary greeting 29, 101

Private Message Delivery option 51  
 no forwarding with 51

Private messages  
 cannot copy 55  
 not forwarded 51

Prompt language, wrong 104

**R**

Recording  
 Alternate greeting 31  
 messages 45  
 Personalized greeting 34  
 Primary greeting 31

Recording a call 44

Recording technique, Greetings 30

Replaying messages 39

Replying  
 to an external message sender 58  
 to an internal message sender 56  
 to messages 39, 41

Retrieving deleted messages 40

Rewinding messages 38, 40

**S**

Saving messages 39

Sending messages, CallPilot 28

Sending messages, Norstar Voice Mail 26

Setting up  
 Off-premise Message Notification  
   to a pager number 80  
   to a telephone number 75  
   to an extension number 78  
 Outbound Transfer  
   to a phone number 69  
   to an extension 70  
 your mailbox 29

Skipping forward in messages 39, 40

Skipping forward to end of messages 38

Special mailboxes  
 General Delivery 15  
 System Administrator 15

Subscriber mailbox 14  
 Guest 14

**T**

Target Attendant 22

Timed Message Delivery option 51

Timeout 104

Transfer 67

Transferring calls

to General Delivery mailbox 37

to Operator 37

to receptionist 37

## U

Urgent Message Delivery option 51

## V

Voice prompts 11, 51, 62

interrupting 9, 12

on a one line display telephone 12